


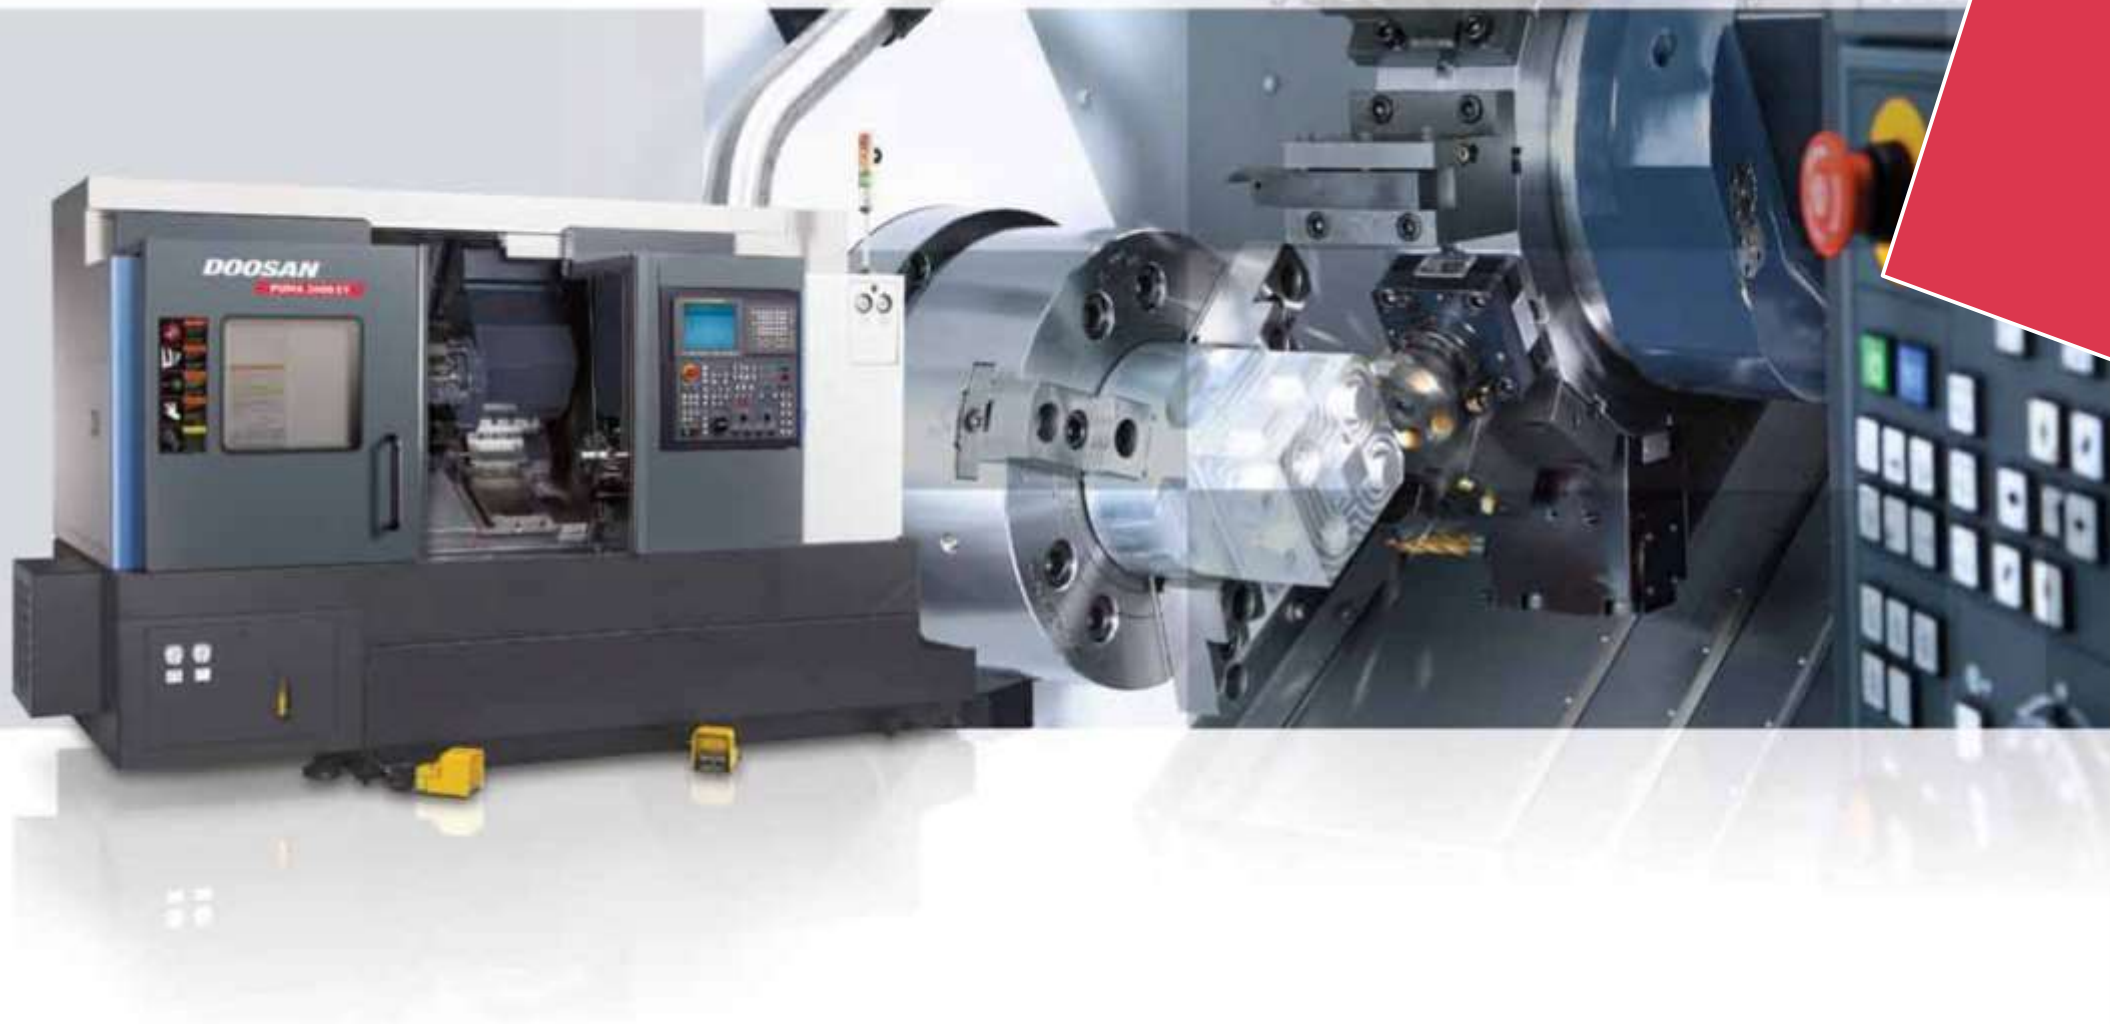

PUMA 2100 / 2600 / 3100 series

Working range / Tooling system / Tool Interference Diagram




Working range


Unit : mm (inch)

PUMA 2100 / 2100L
12 station.


OD CLAMPER

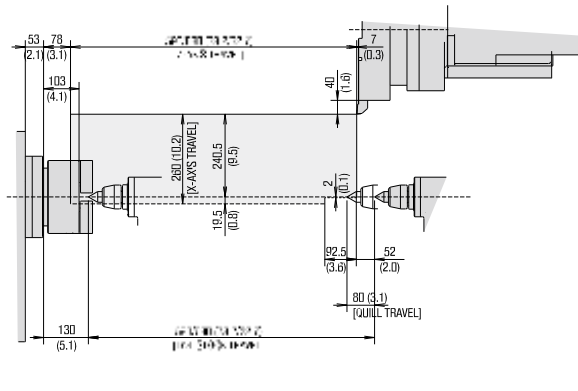


ID HOLDER

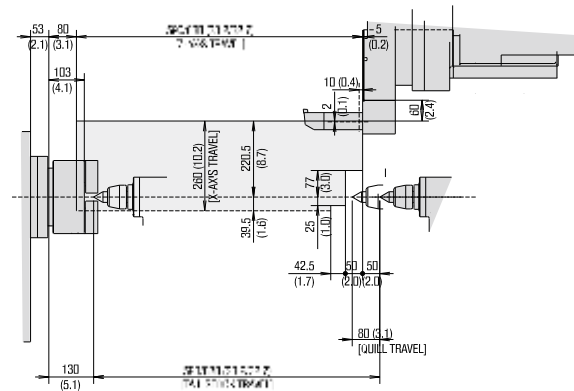

FACE TOOL HOLDER

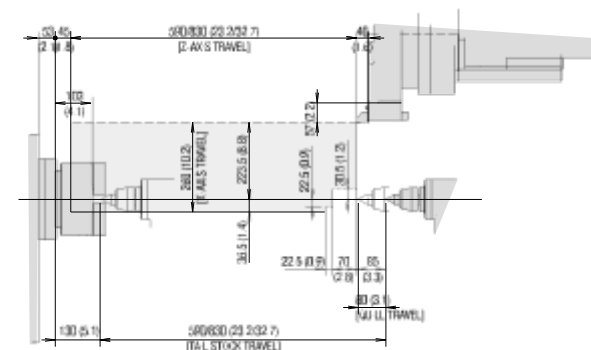


EXTENDED OD HOLDER

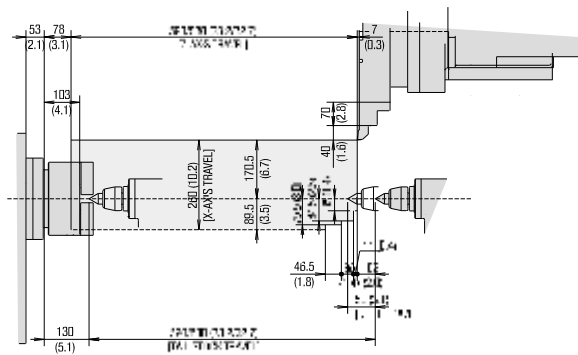


PUMA 2100S / 2100LS
12 station.

PUMA 2100S / 2100LS
12 station.

FACE TOOL HOLDER

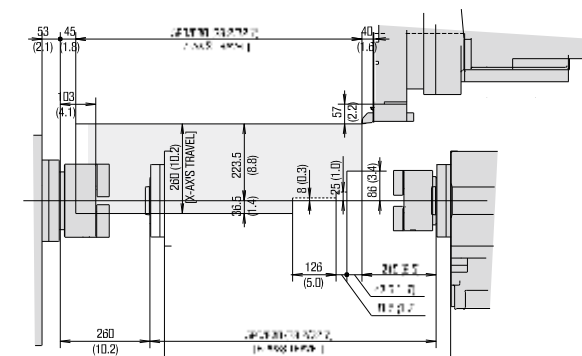

CUT OFF HOLDER

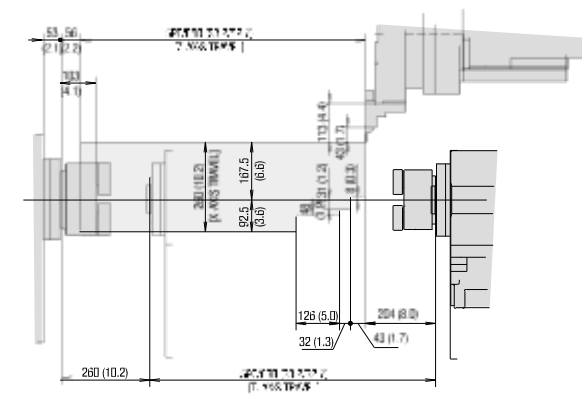


Working range


Unit : mm (inch)

PUMA 2100M / 2100Y / 2100LM / 2100LY
12 station. - BMT55P


OD HOLDER

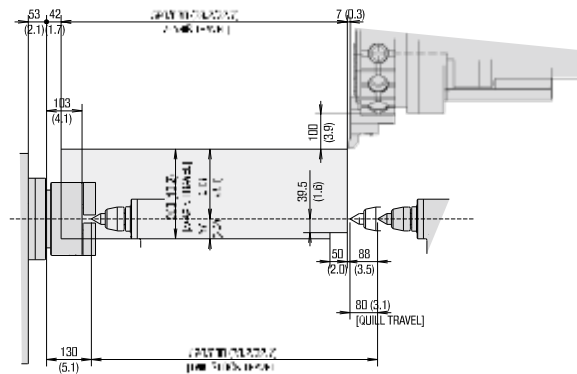


ID HOLDER

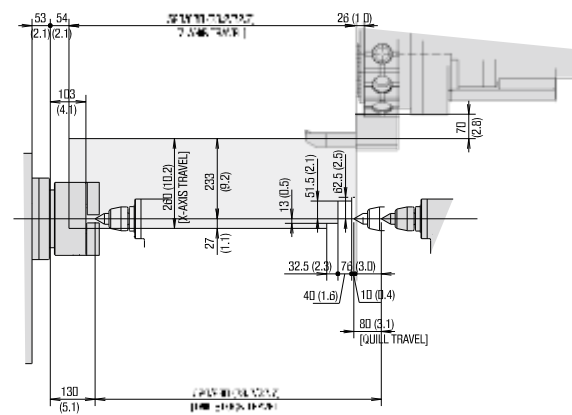


FACE TOOL HOLDER

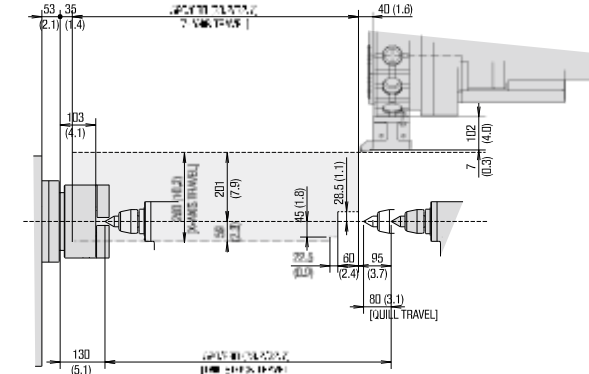

STRAIGHT MILLING

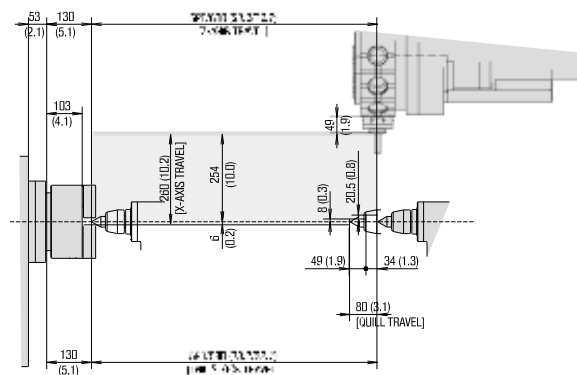

ANGULAR MILLING (MAIN)

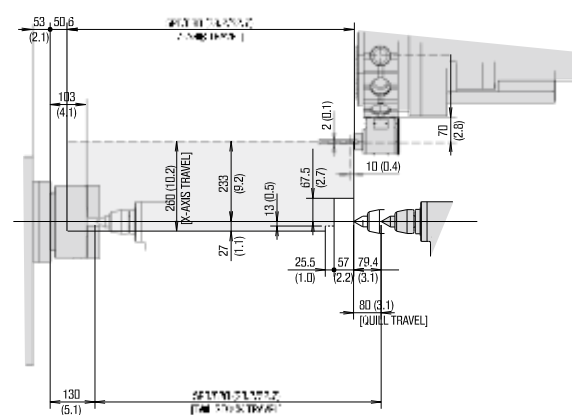


Working range

Unit : mm (inch)


PUMA 2100MS / 2100SY / 2100LMS / 2100LSY

12 station. - BMT55P


OD HOLDER

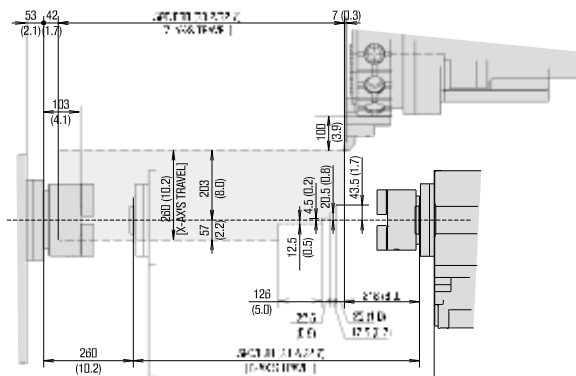


ID HOLDER

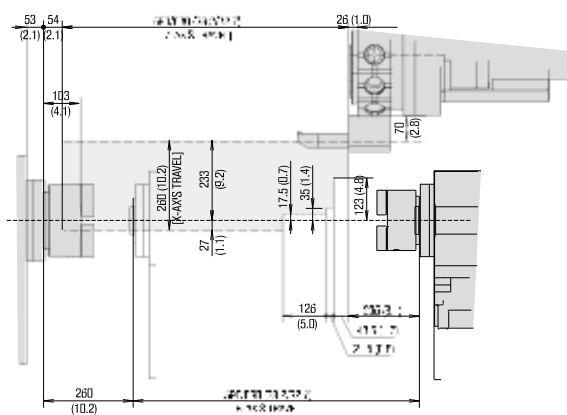


FACE TOOL HOLDER

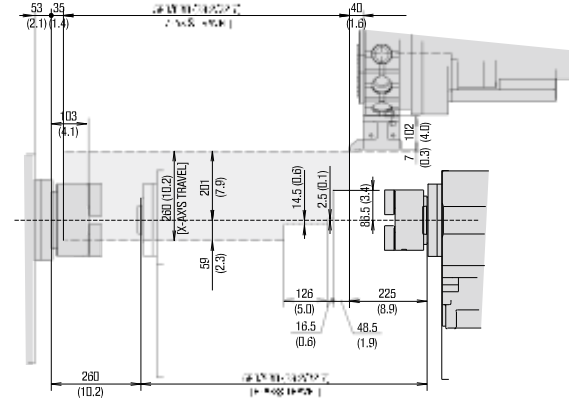


DOUBLE OD HOLDER

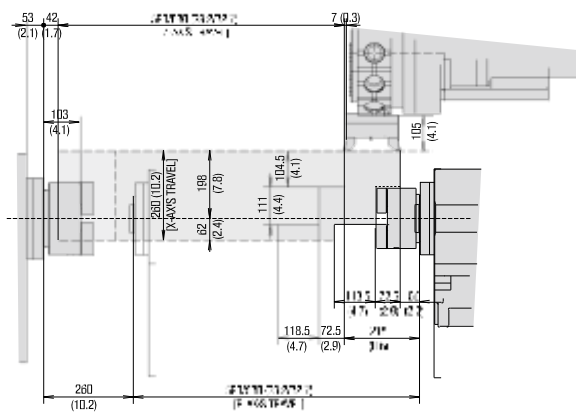

DOUBLE ID HOLDER

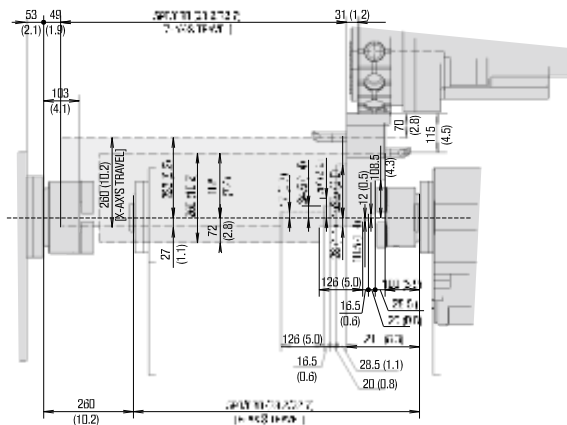

CUT OFF HOLDER

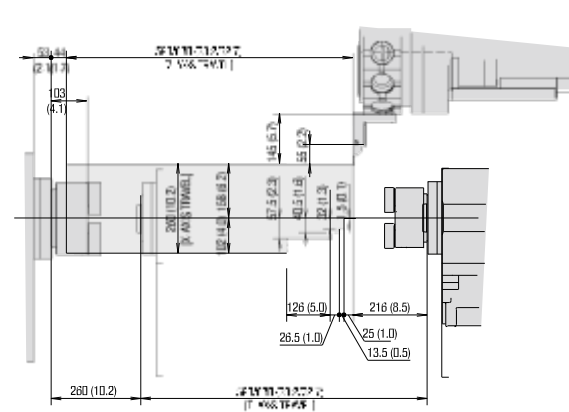


Working range

Unit : mm (inch)


PUMA 2100MS / 2100SY / 2100LMS / 2100LSY

12 station. - BMT55P


STRAIGHT MILLING

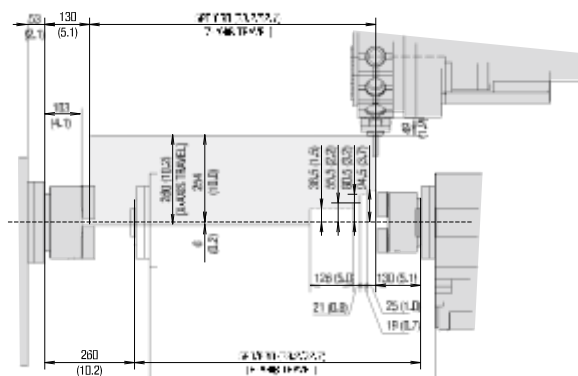

ANGULAR MILLING (SUB)

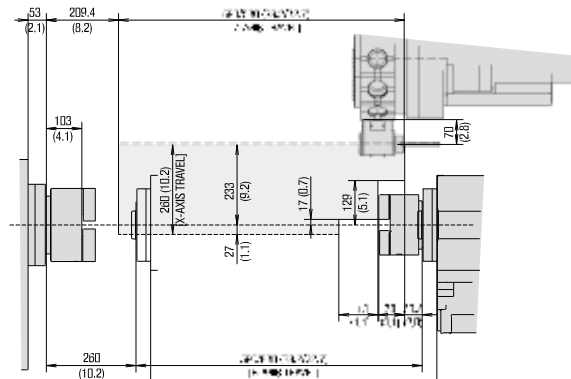

ANGULAR MILLING (MAIN)

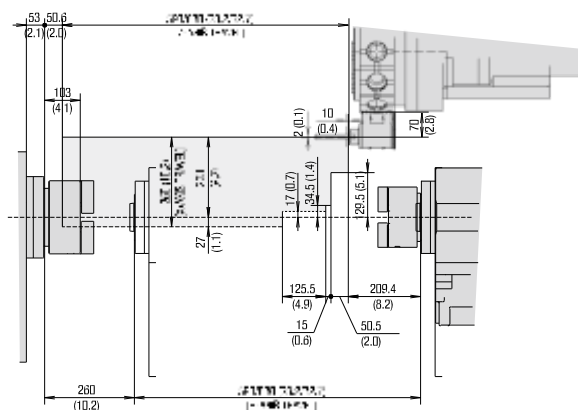


Working range


Unit : mm (inch)

PUMA 2100M / 2100Y / 2100LM / 2100LY **opt.**
12 station. - BMT65P


OD HOLDER

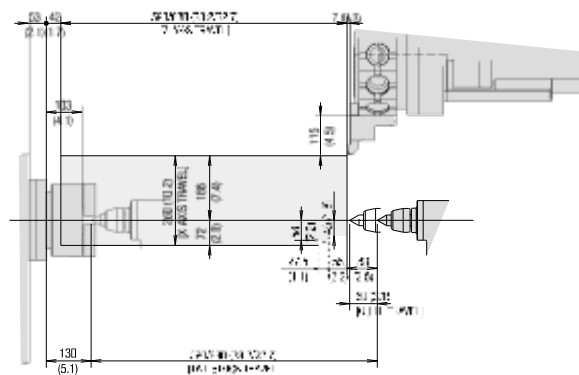


ID HOLDER

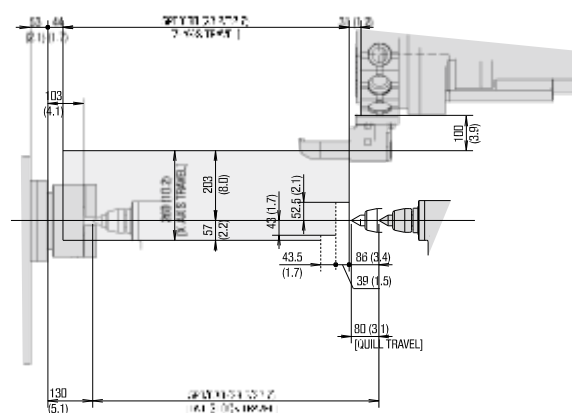


FACE TOOL HOLDER

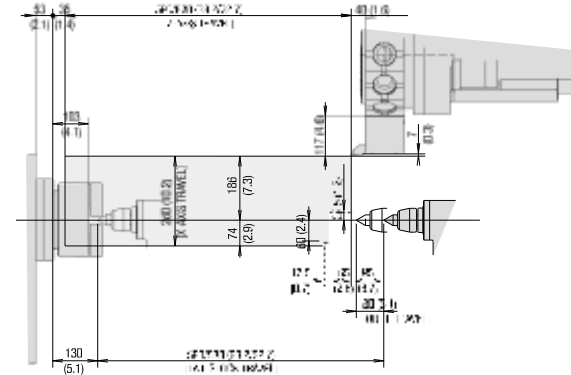

STRAIGHT MILLING

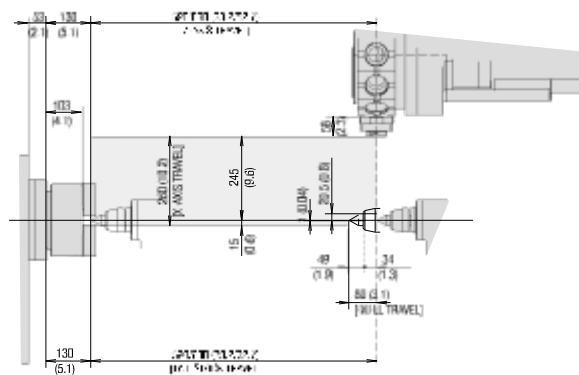

ANGULAR MILLING (MAIN)

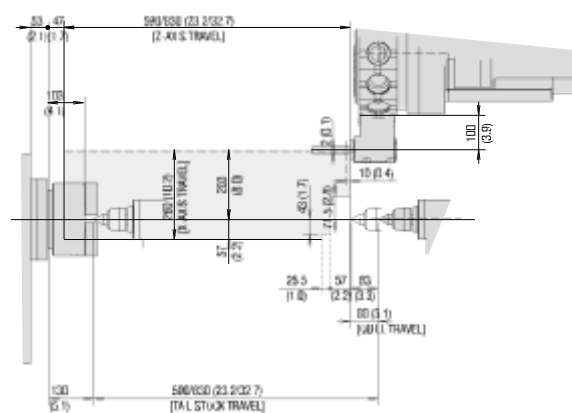


Working range


Unit : mm (inch)

PUMA 2100MS / 2100SY / 2100LMS / 2100LSY opt.
12 station. - BMT65P


OD HOLDER

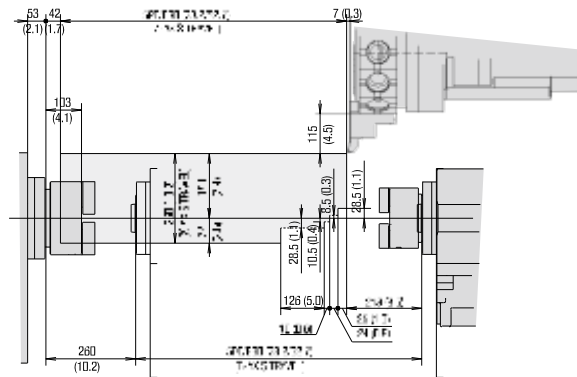


ID HOLDER

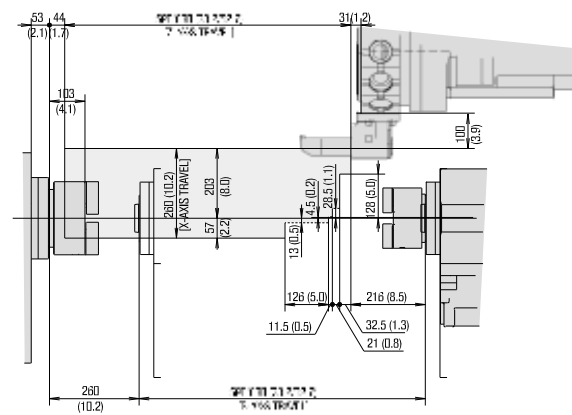


FACE TOOL HOLDER

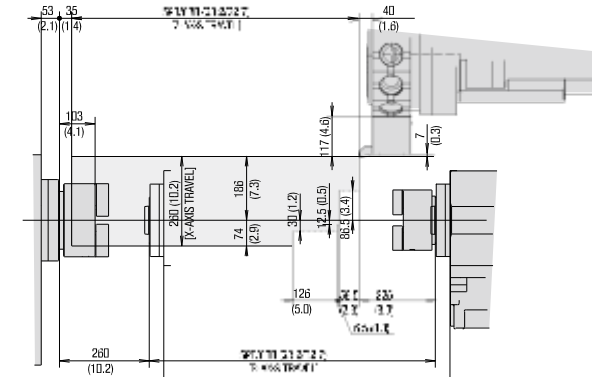


DOUBLE OD HOLDER

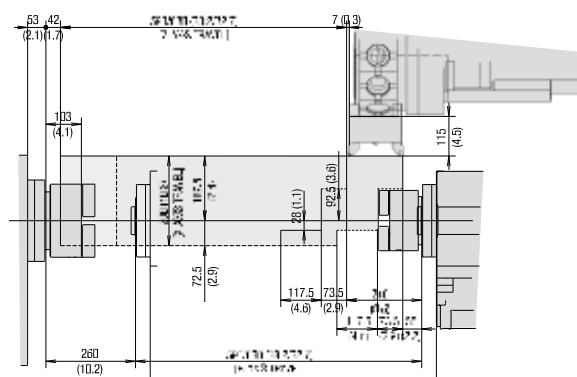

DOUBLE ID HOLDER

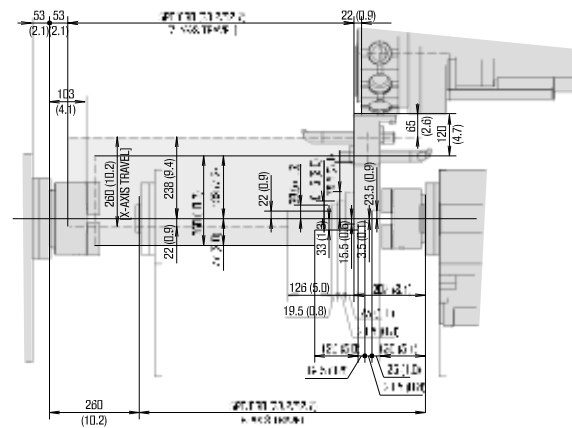

CUT OFF HOLDER

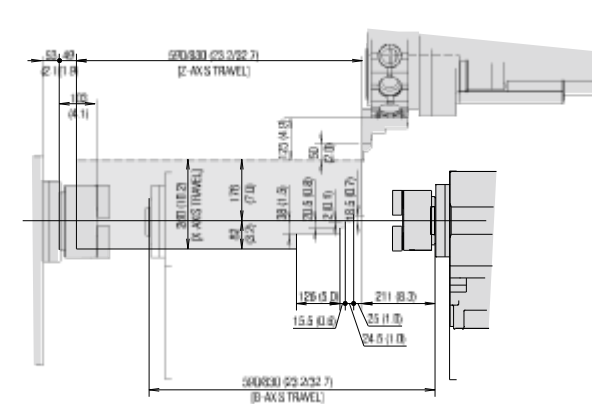


Working range


Unit : mm (inch)

PUMA 2100MS / 2100SY / 2100LMS / 2100LSY **opt.**
12 station. - BMT65P


STRAIGHT MILLING

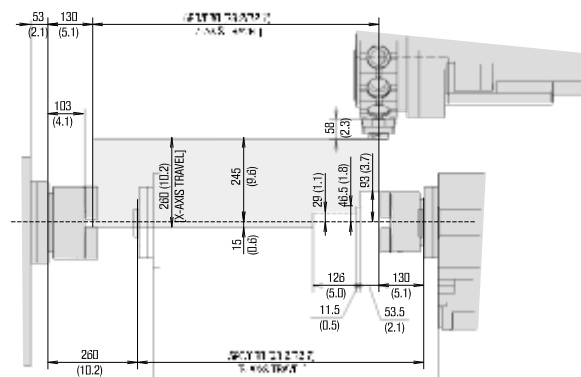

ANGULAR MILLING (SUB)

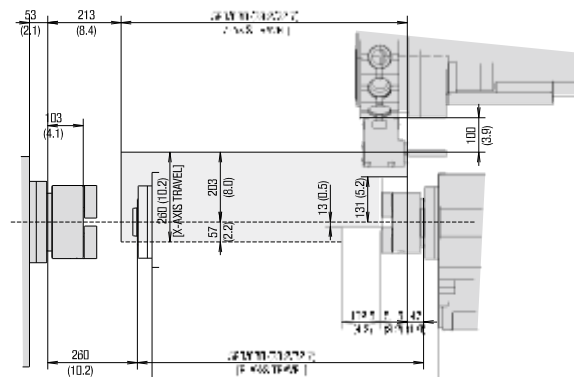

ANGULAR MILLING (MAIN)

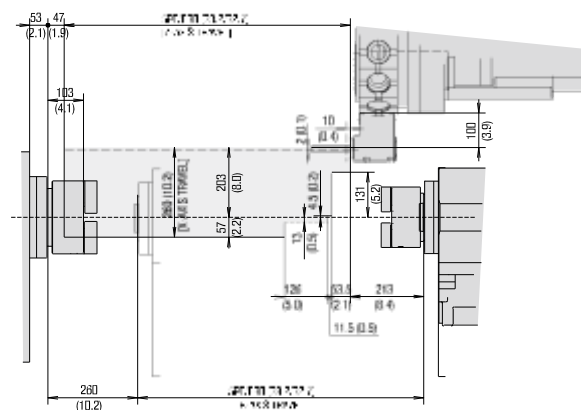


Working range


Unit : mm (inch)

PUMA 2600 / 2600L
12 station.


OD CLAMPER

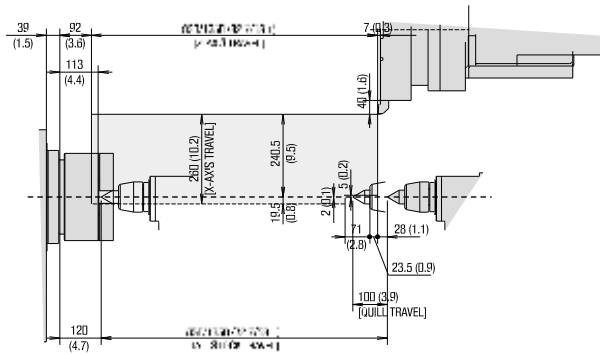


ID HOLDER

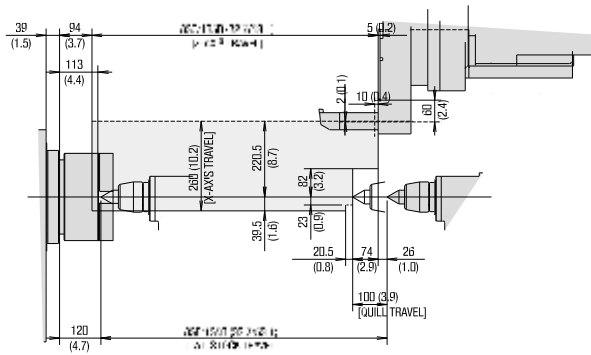

FACE TOOL HOLDER

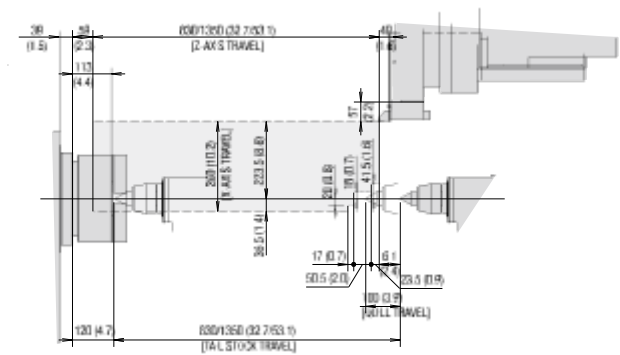


EXTENDED OD HOLDER

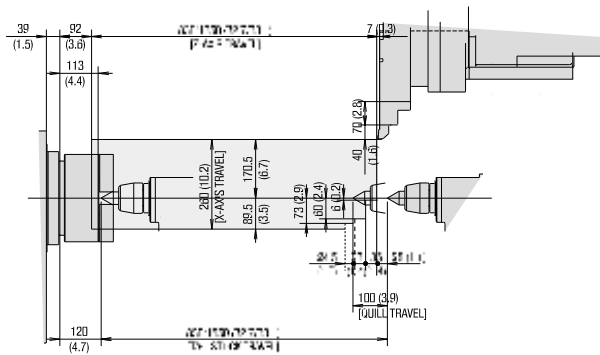


PUMA 2600S / 2600LS
12 station.

PUMA 2600S / 2600LS
12 station.

FACE TOOL HOLDER

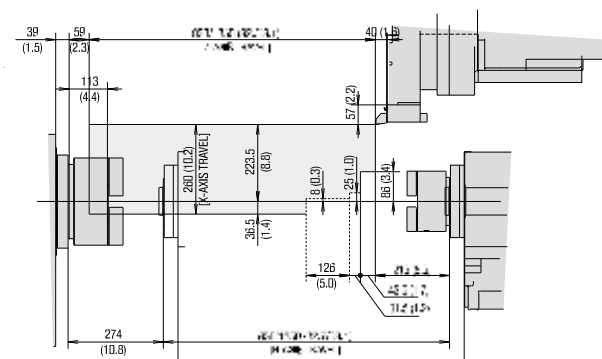

CUT OFF HOLDER

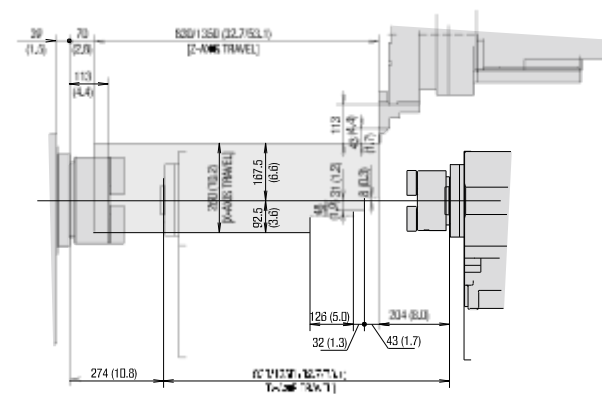


Working range

Unit : mm (inch)


PUMA 2600M / 2600Y / 2600LM / 2600LY

12 station. - BMT65P


OD HOLDER

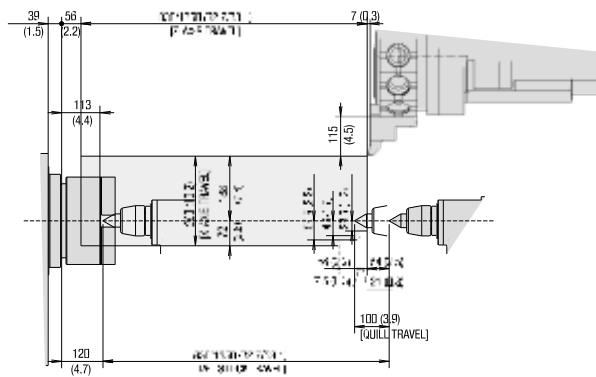


ID HOLDER

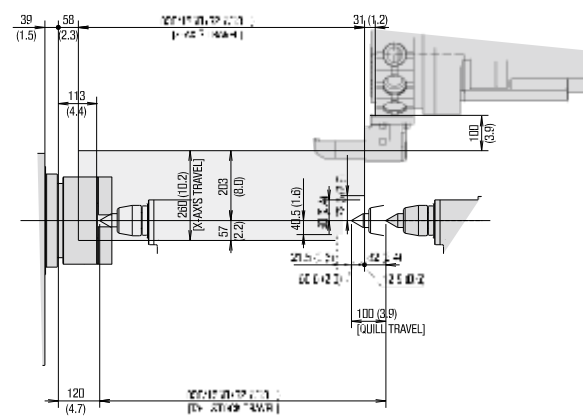


FACE TOOL HOLDER

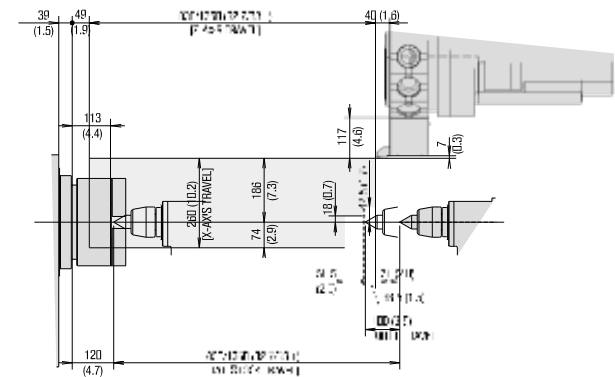

STRAIGHT MILLING

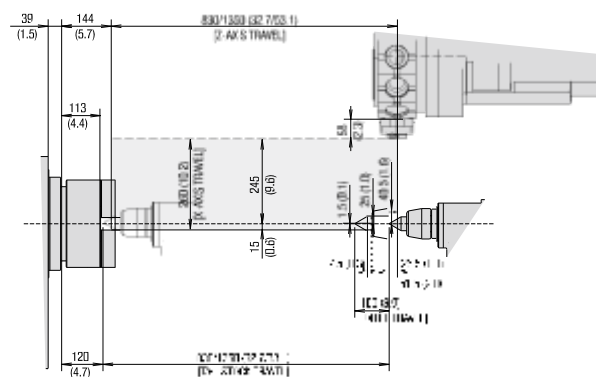

ANGULAR MILLING (MAIN)

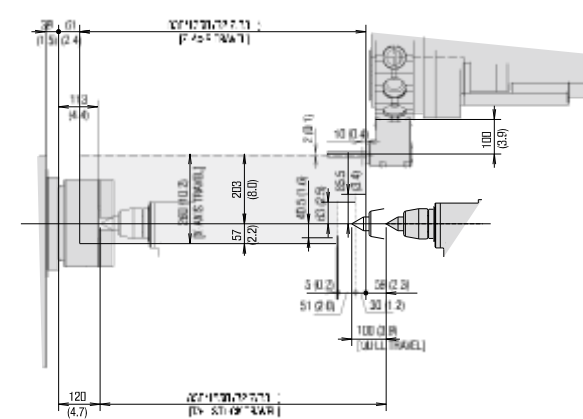


Working range


Unit : mm (inch)

PUMA 2600MS / 2600SY / 2600LMS / 2600LSY
12 station. - BMT65P


OD HOLDER

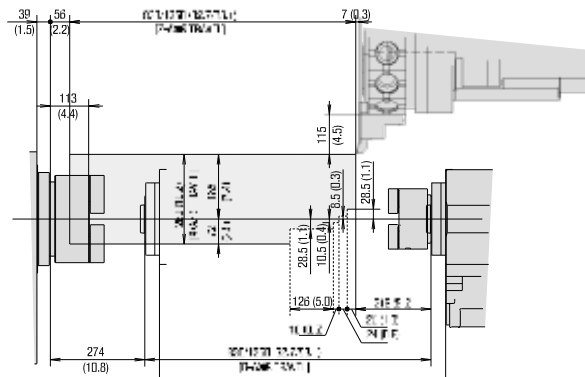


ID HOLDER

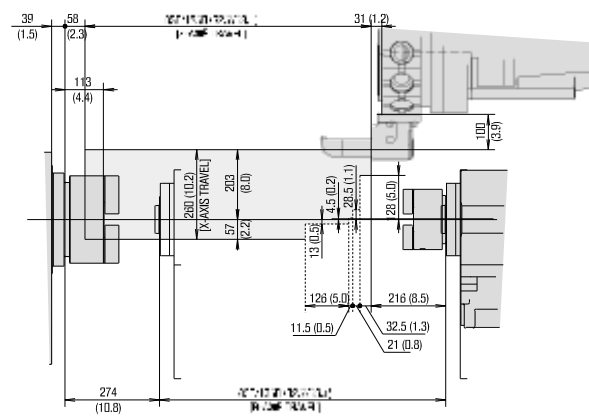


FACE TOOL HOLDER

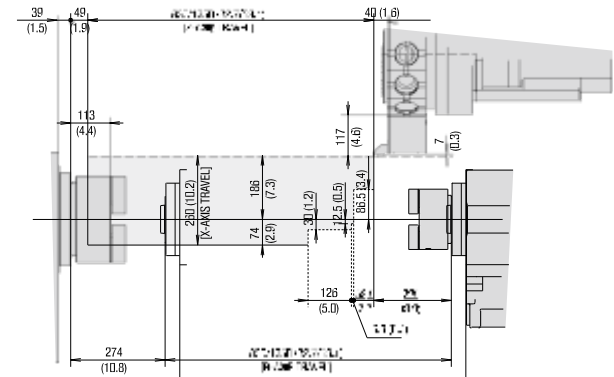


DOUBLE OD HOLDER

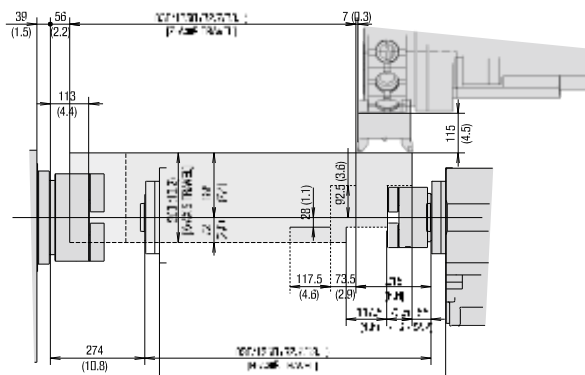

DOUBLE ID HOLDER

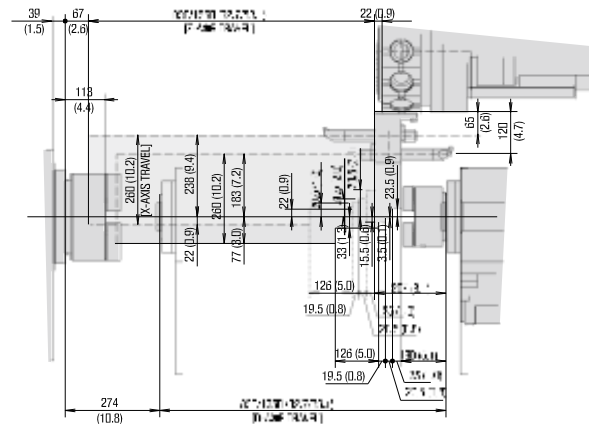

CUT OFF HOLDER

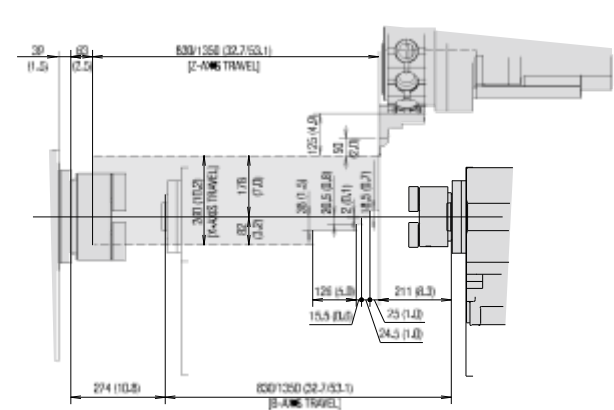


Working range


Unit : mm (inch)

PUMA 2600MS / 2600SY / 2600LMS / 2600LSY
12 station. - BMT65P


STRAIGHT MILLING

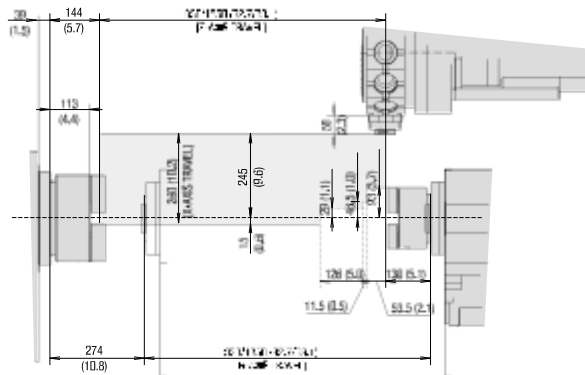

ANGULAR MILLING (SUB)

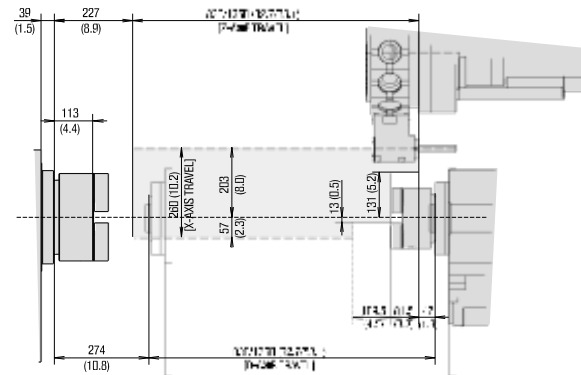

ANGULAR MILLING (MAIN)

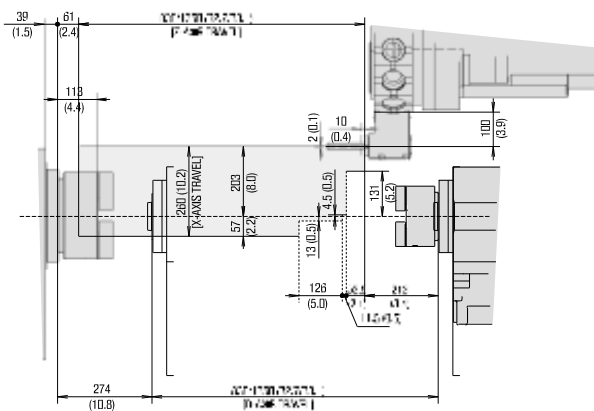


Working range


Unit : mm (inch)

PUMA 3100 / 3100L
10 station.


OD CLAMPER

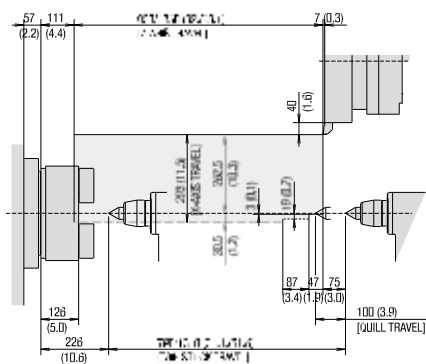


ID HOLDER

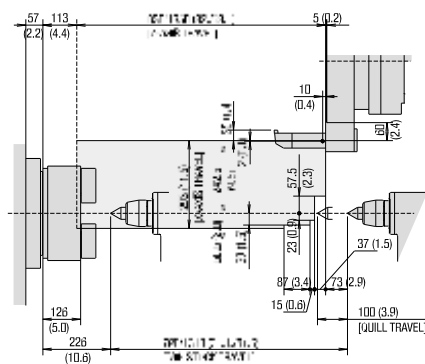

FACE TOOL HOLDER

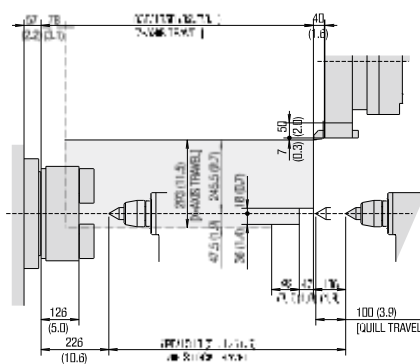

EXTEND OD HOLDER

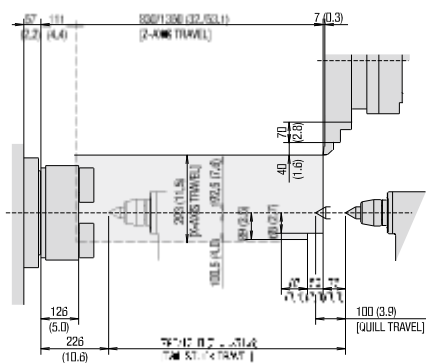


Working range


Unit : mm (inch)

PUMA 3100M / 3100Y / 3100LM / 3100LY
12 station. - BMT65P


OD HOLDER

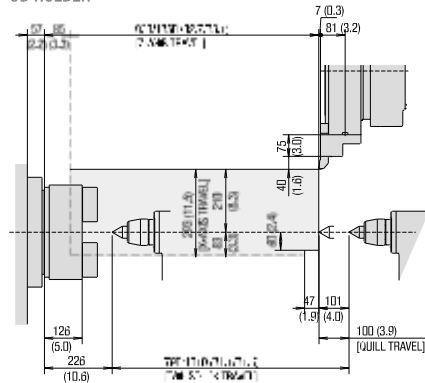


ID HOLDER

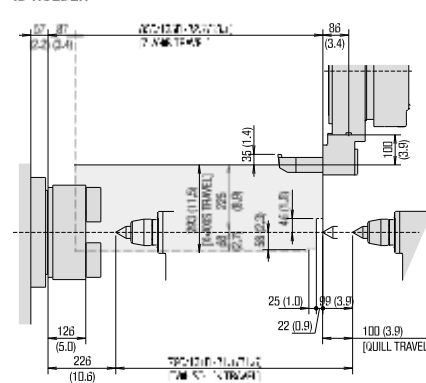


FACE TOOL HOLDER

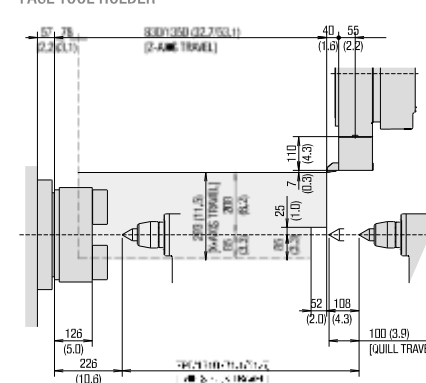


EXTEND OD HOLDER

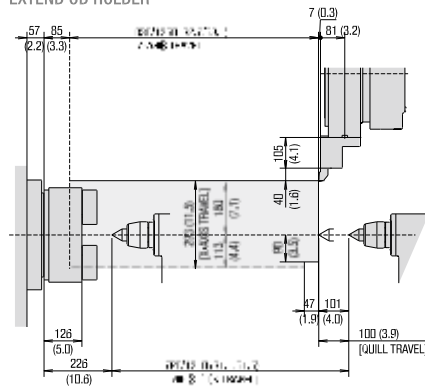

STRAIGHT MILLING

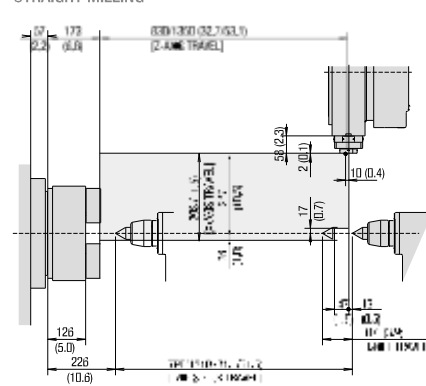

ANGULAR MILLING

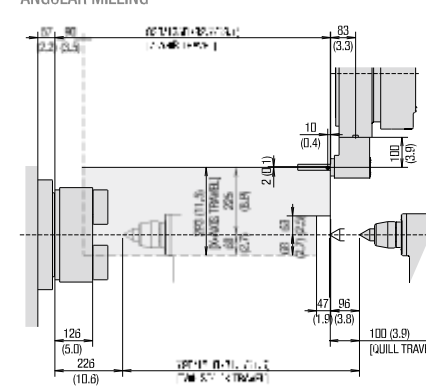


Working range


Unit : mm (inch)

PUMA 3100XL / 3100UL
10 station.


OD CLAMPER

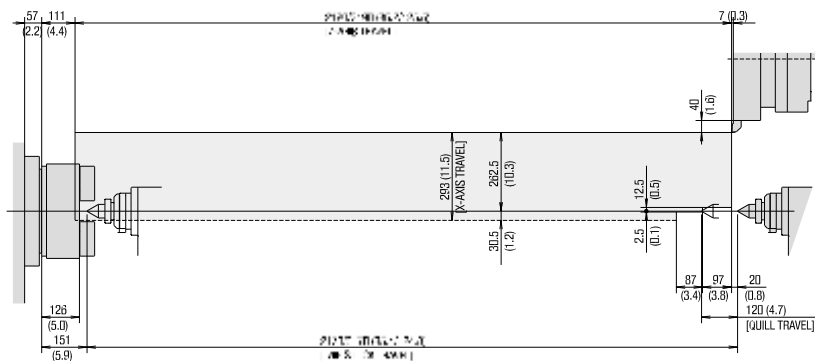


ID HOLDER

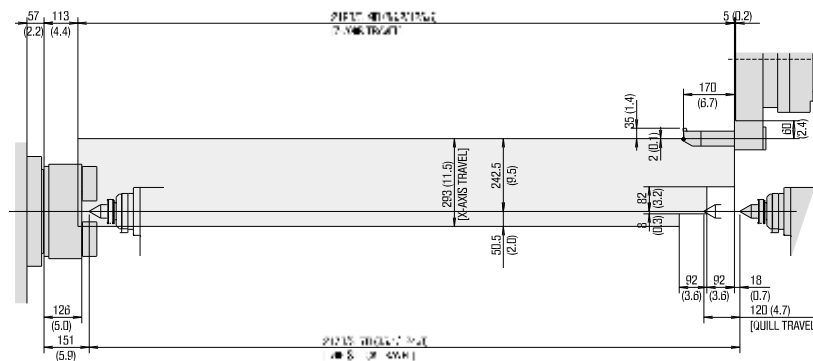

FACE TOOL HOLDER

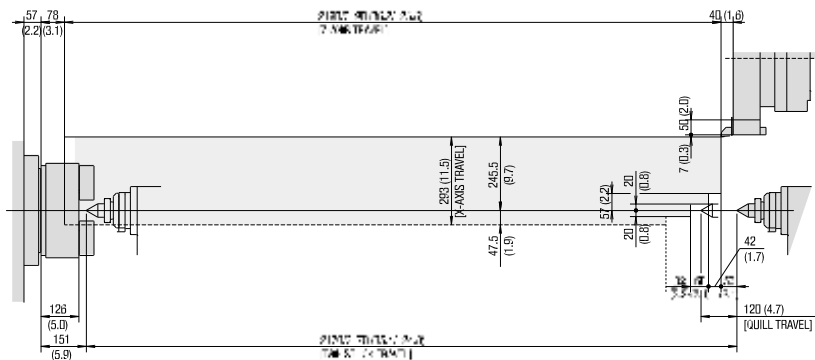

EXTEND OD HOLDER

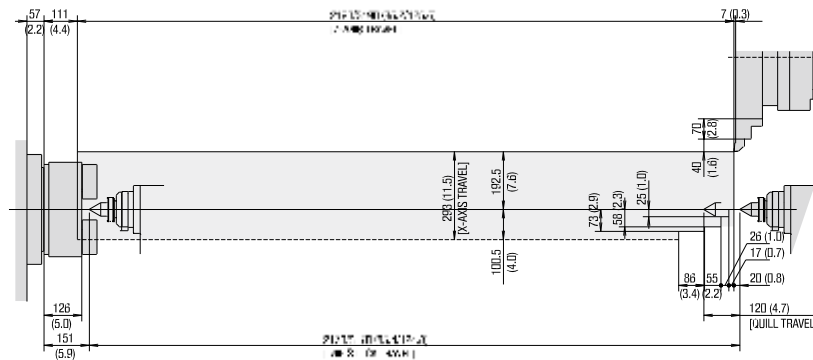


Working range


Unit : mm (inch)

PUMA 3100XLM / 3100XLY / 3100ULM / 3100ULY
12 station. - BMT65P


OD HOLDER

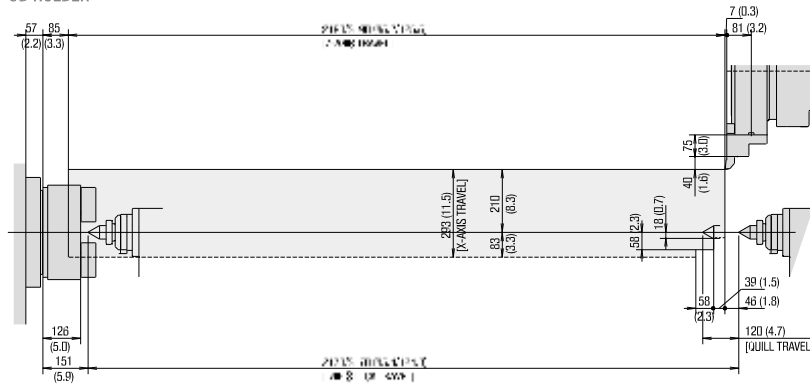

ID HOLDER

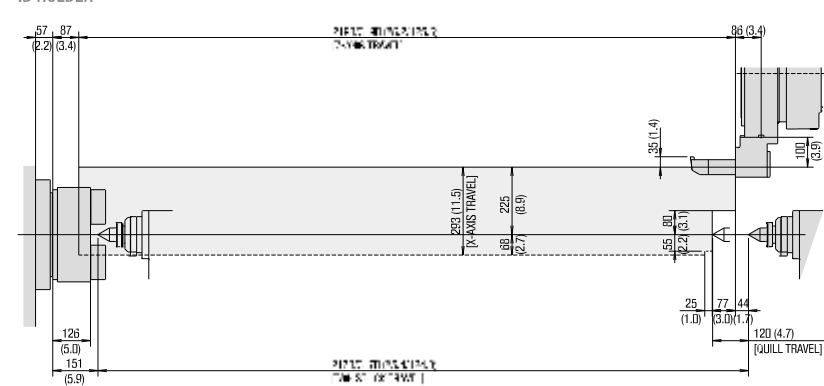

FACE TOOL HOLDER

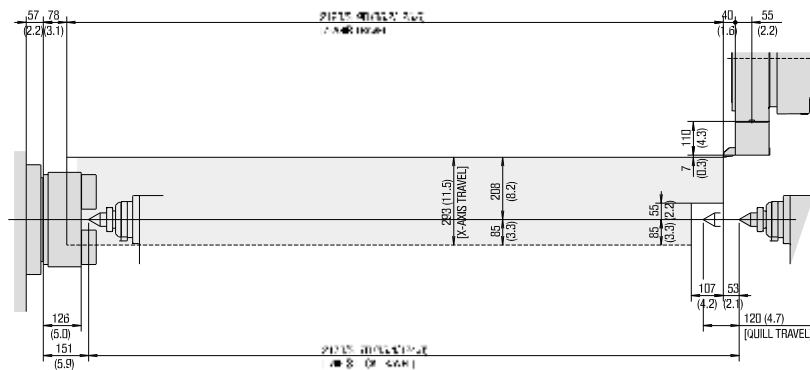


Working range


Unit : mm (inch)

PUMA 3100XLM / 3100XLY / 3100ULM / 3100ULY
12 station. - BMT65P


EXTEND OD HOLDER

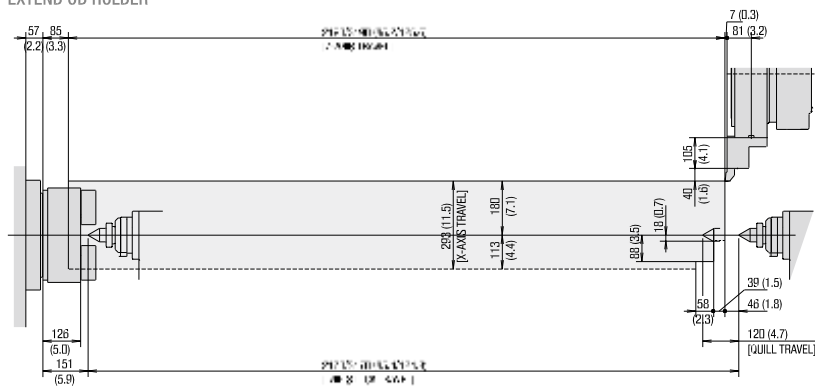

STRAIGHT MILLING

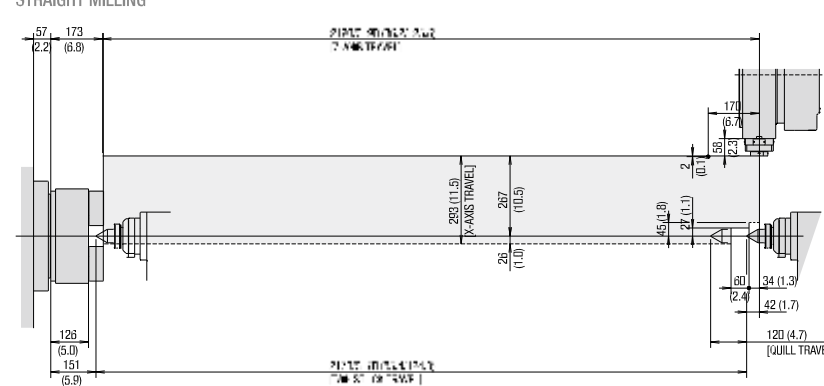


ANGULAR MILLING

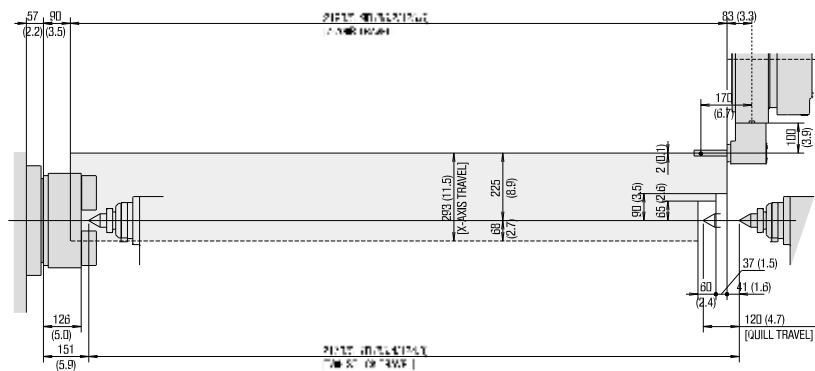

Tooling system

Unit : mm (inch)



PUMA 2100 / 2100L / 2600 / 2600L Std.

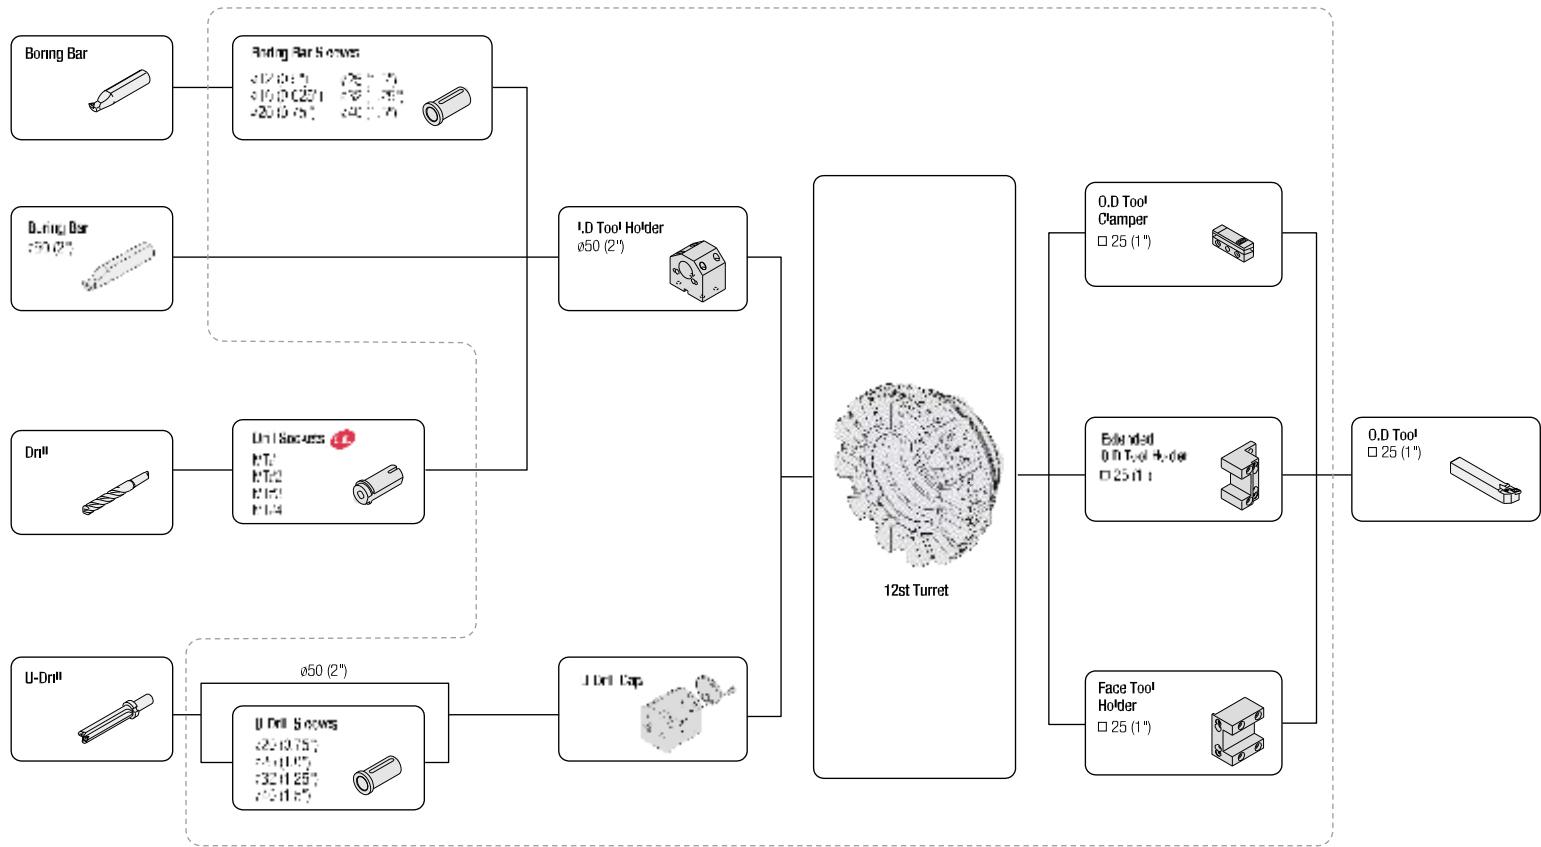

• Specifications are subject to change without prior notice.

Tooling system

Unit : mm (inch)

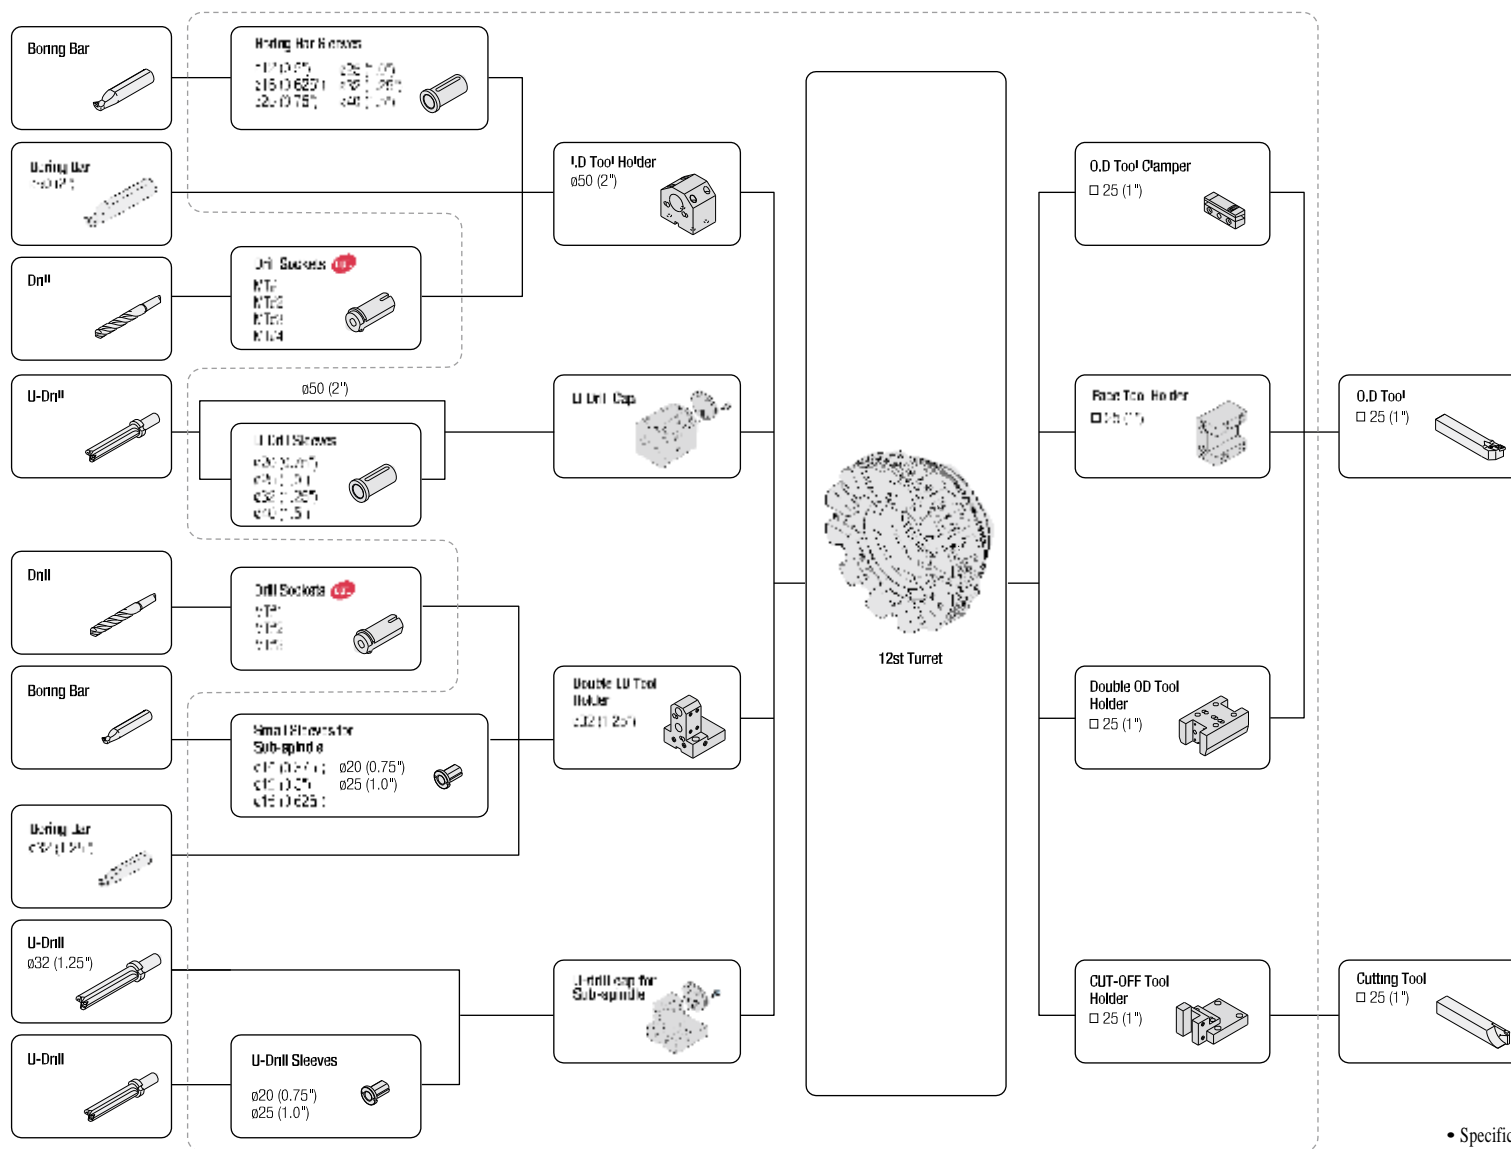PUMA 2100S / 2100LS / 2600S / 2600LS 

- Specifications are subject to change without prior notice.


Tooling system

Unit : mm (inch)

PUMA 2100M / 2100LM / 2100Y / 2100LY

Std.

12 station. - BMT55P

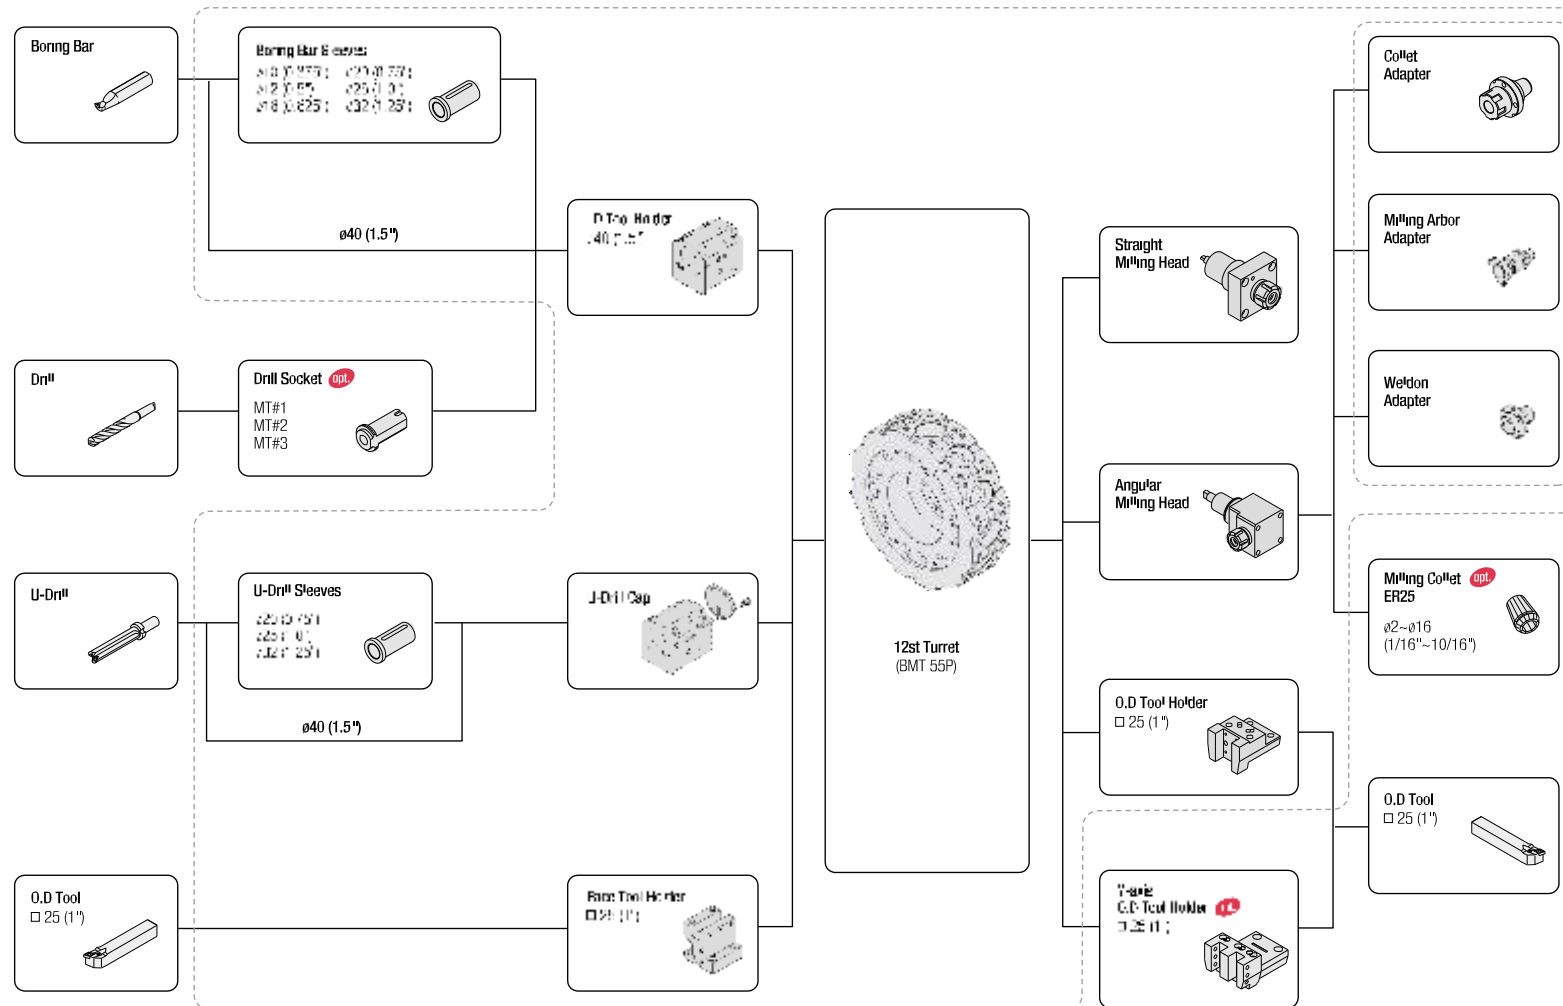


• Specifications are subject to change without prior notice.

Tooling system

Unit : mm (inch)

PUMA 2100M / 2100LM / 2100Y / 2100LY **opt.**

24 station. - BMT55P

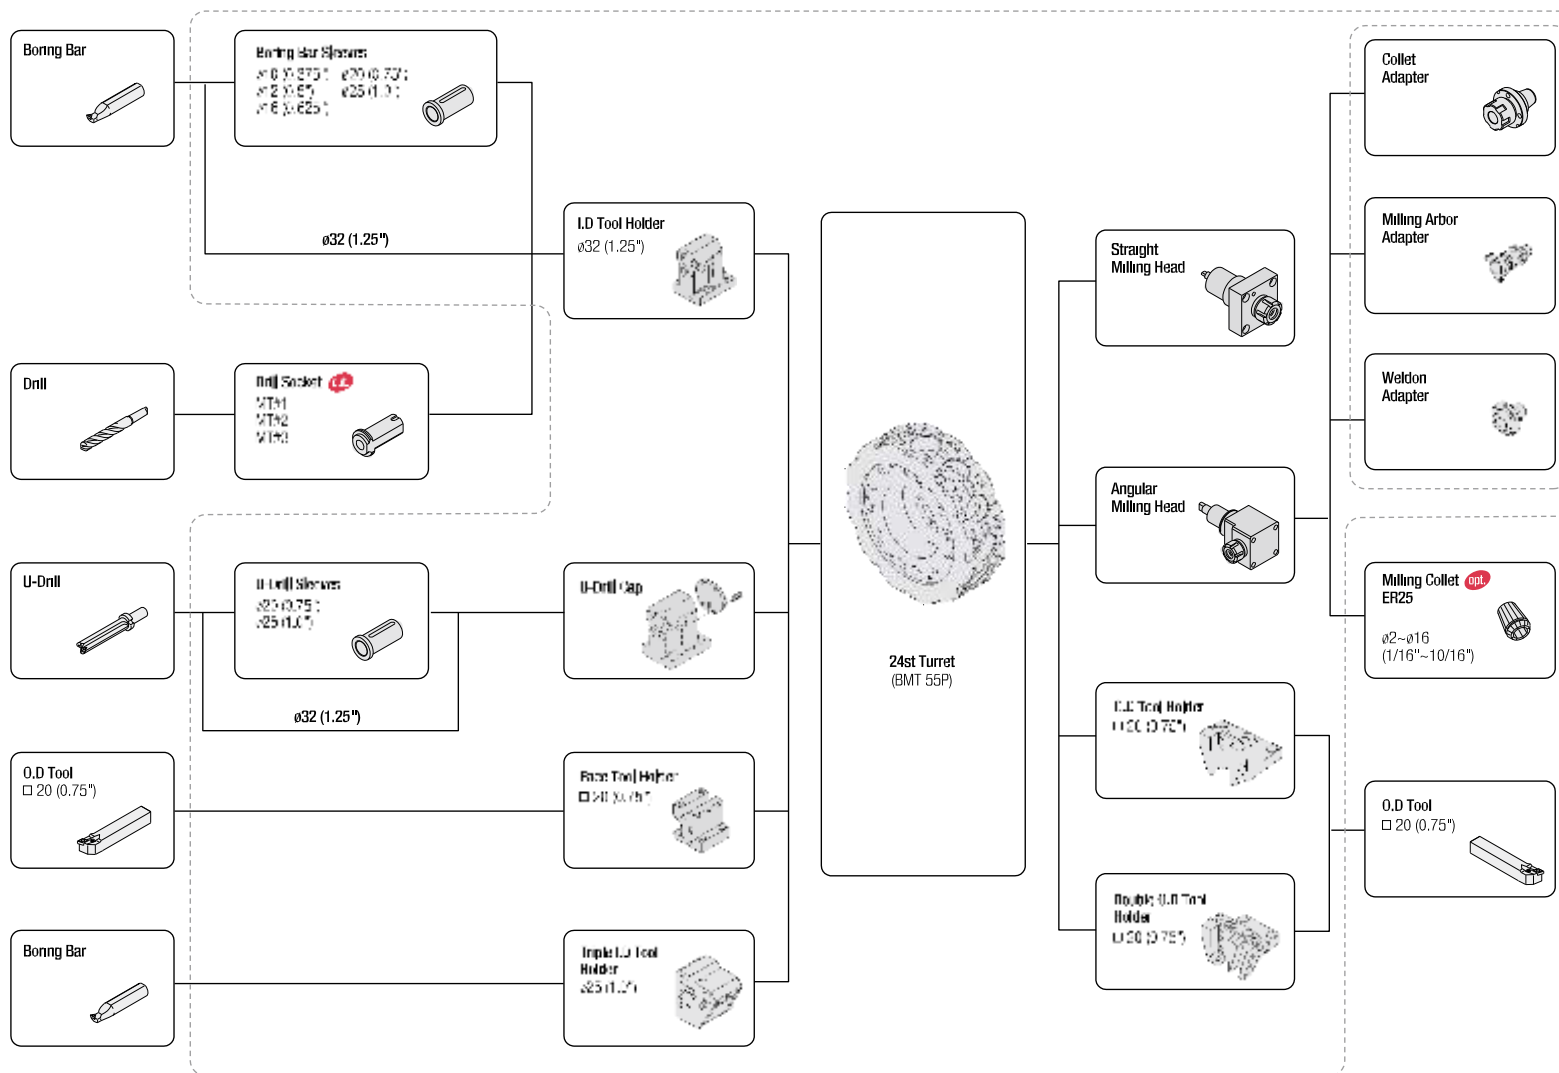


Tooling system

Unit : mm (inch)

PUMA 2100MS / 2100LMS / 2100SY / 2100LSY Std.

12 station. - BMT55P

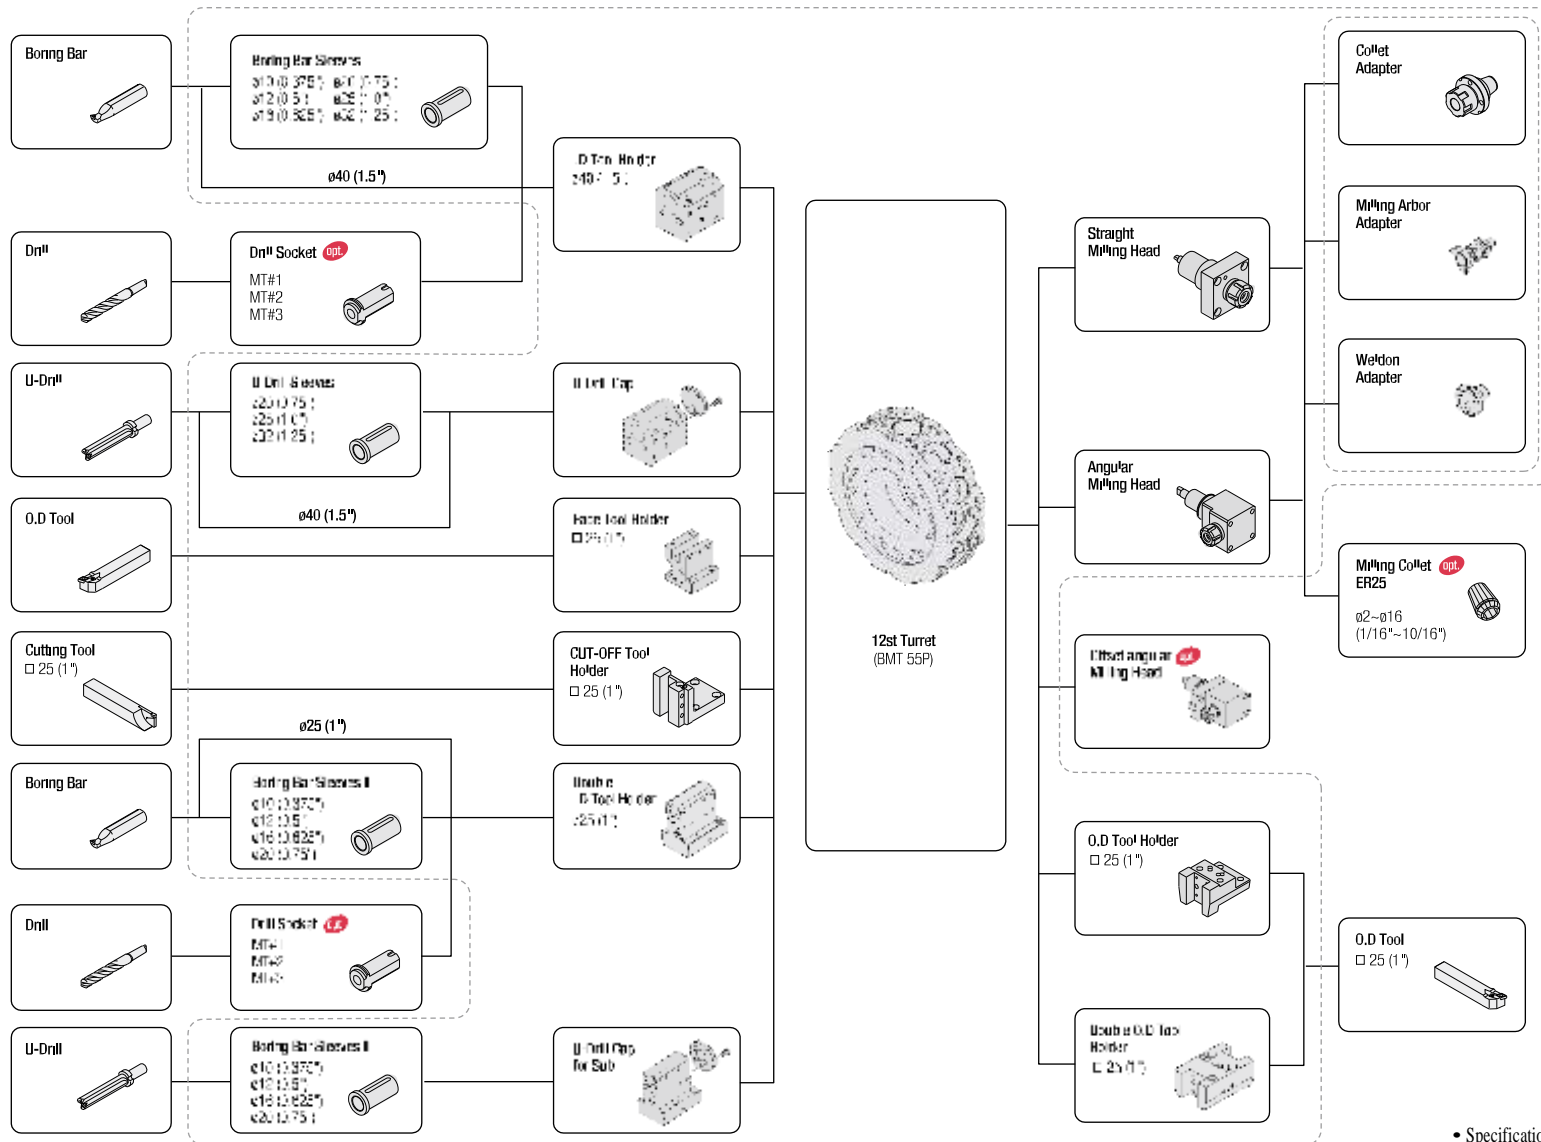


• Specifications are subject to change without prior notice.

Tooling system

Unit : mm (inch)

PUMA 2100MS / 2100LMS / 2100SY / 2100LSY opt.

24 station. - BMT55P

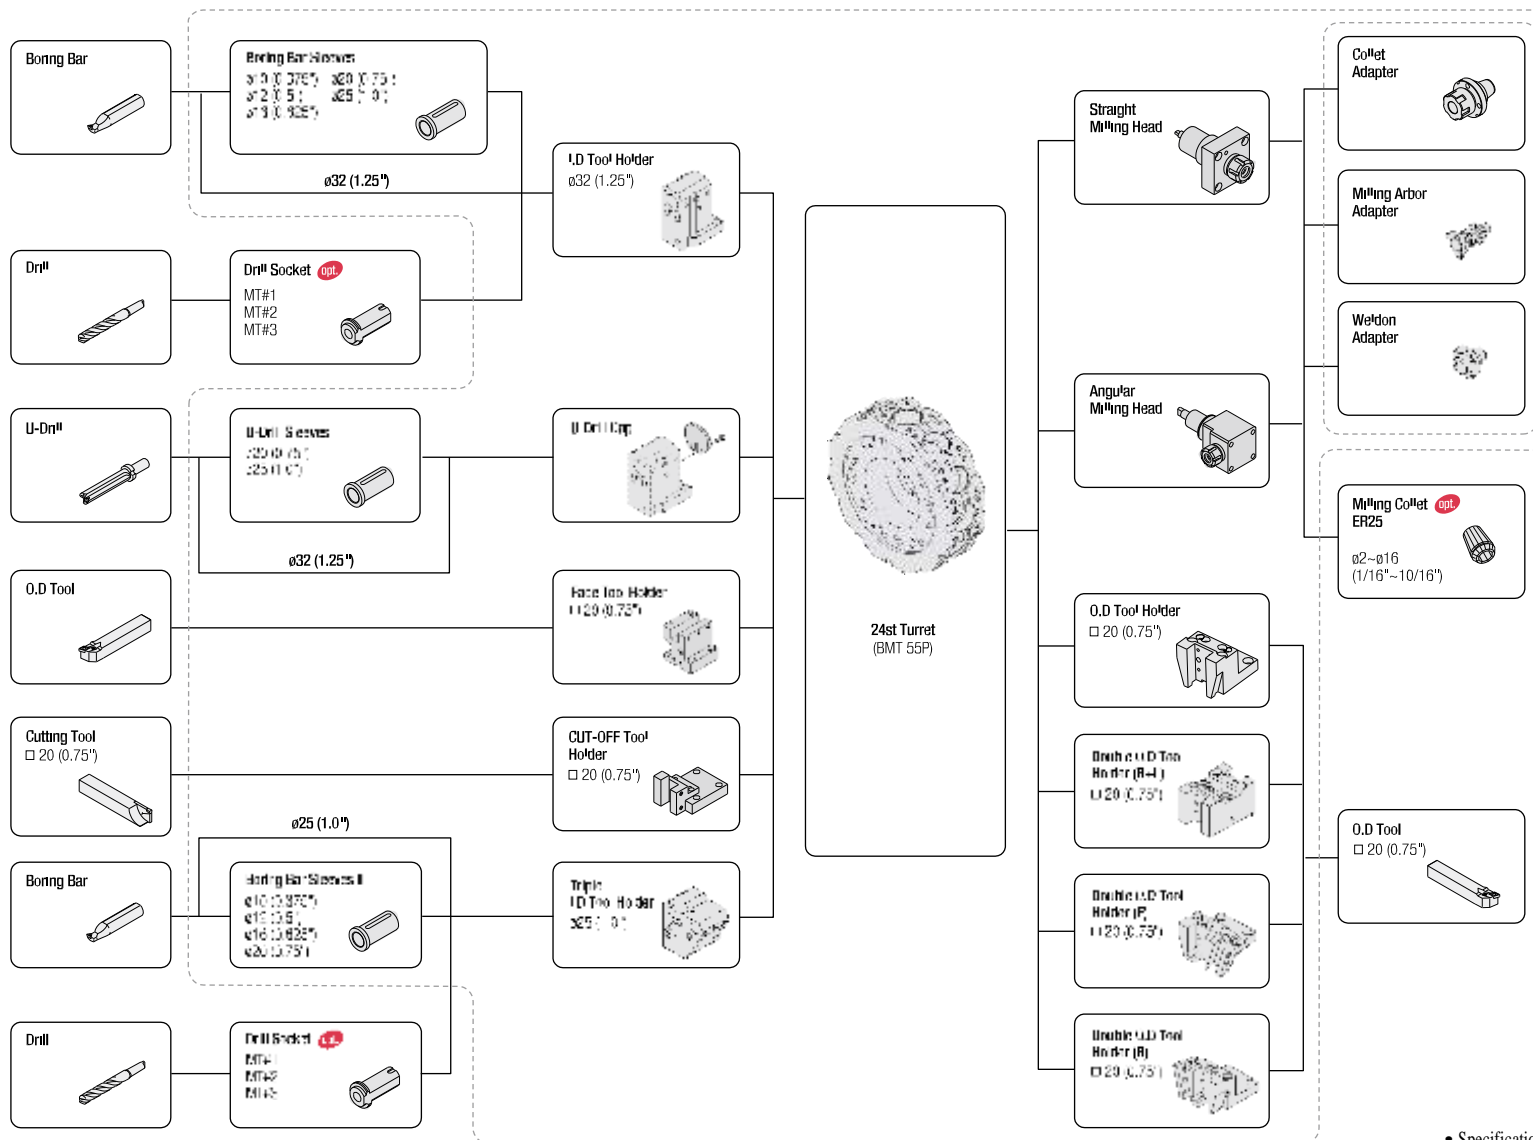


• Specifications are subject to change without prior notice.

Tooling system

Unit : mm (inch)

PUMA 2600M / 2600LM / 2600Y / 2600LY Std.

12 station. - BMT65P

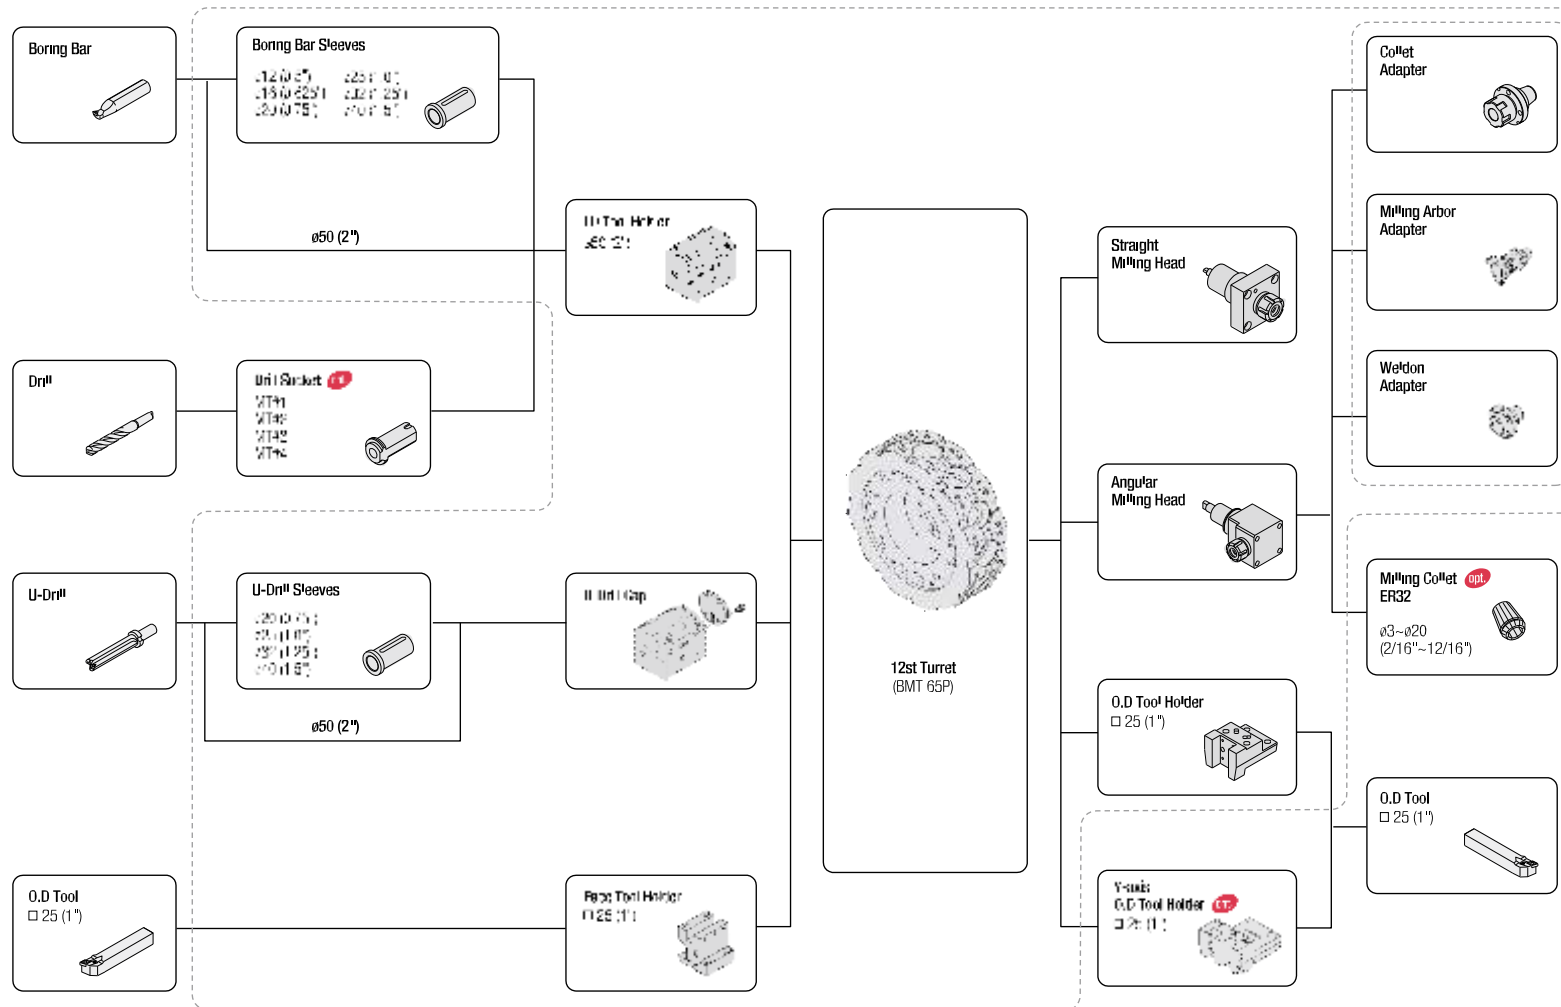


• Specifications are subject to change without prior notice.

Tooling system

Unit : mm (inch)

PUMA 2600M / 2600LM / 2600Y / 2600LY **opt.**

24 station. - BMT65P

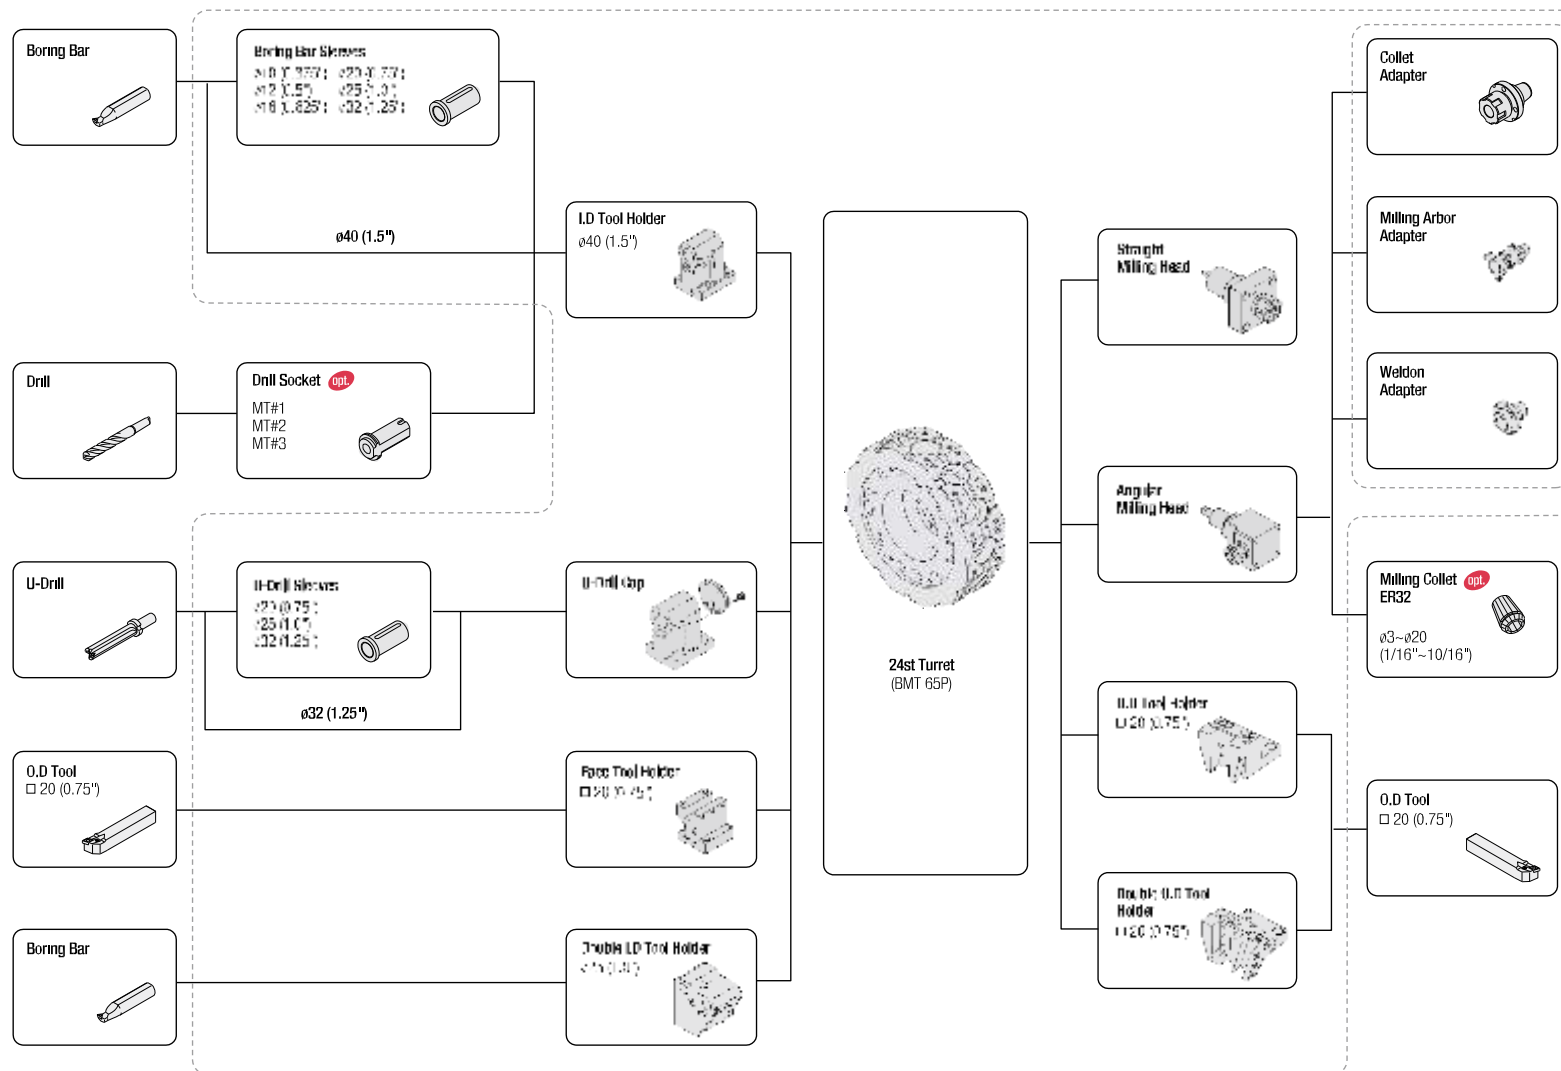


Tooling system

Unit : mm (inch)

PUMA 2600MS / 2600LMS / 2600SY / 2600LSY Std.


12 station. - BMT65P

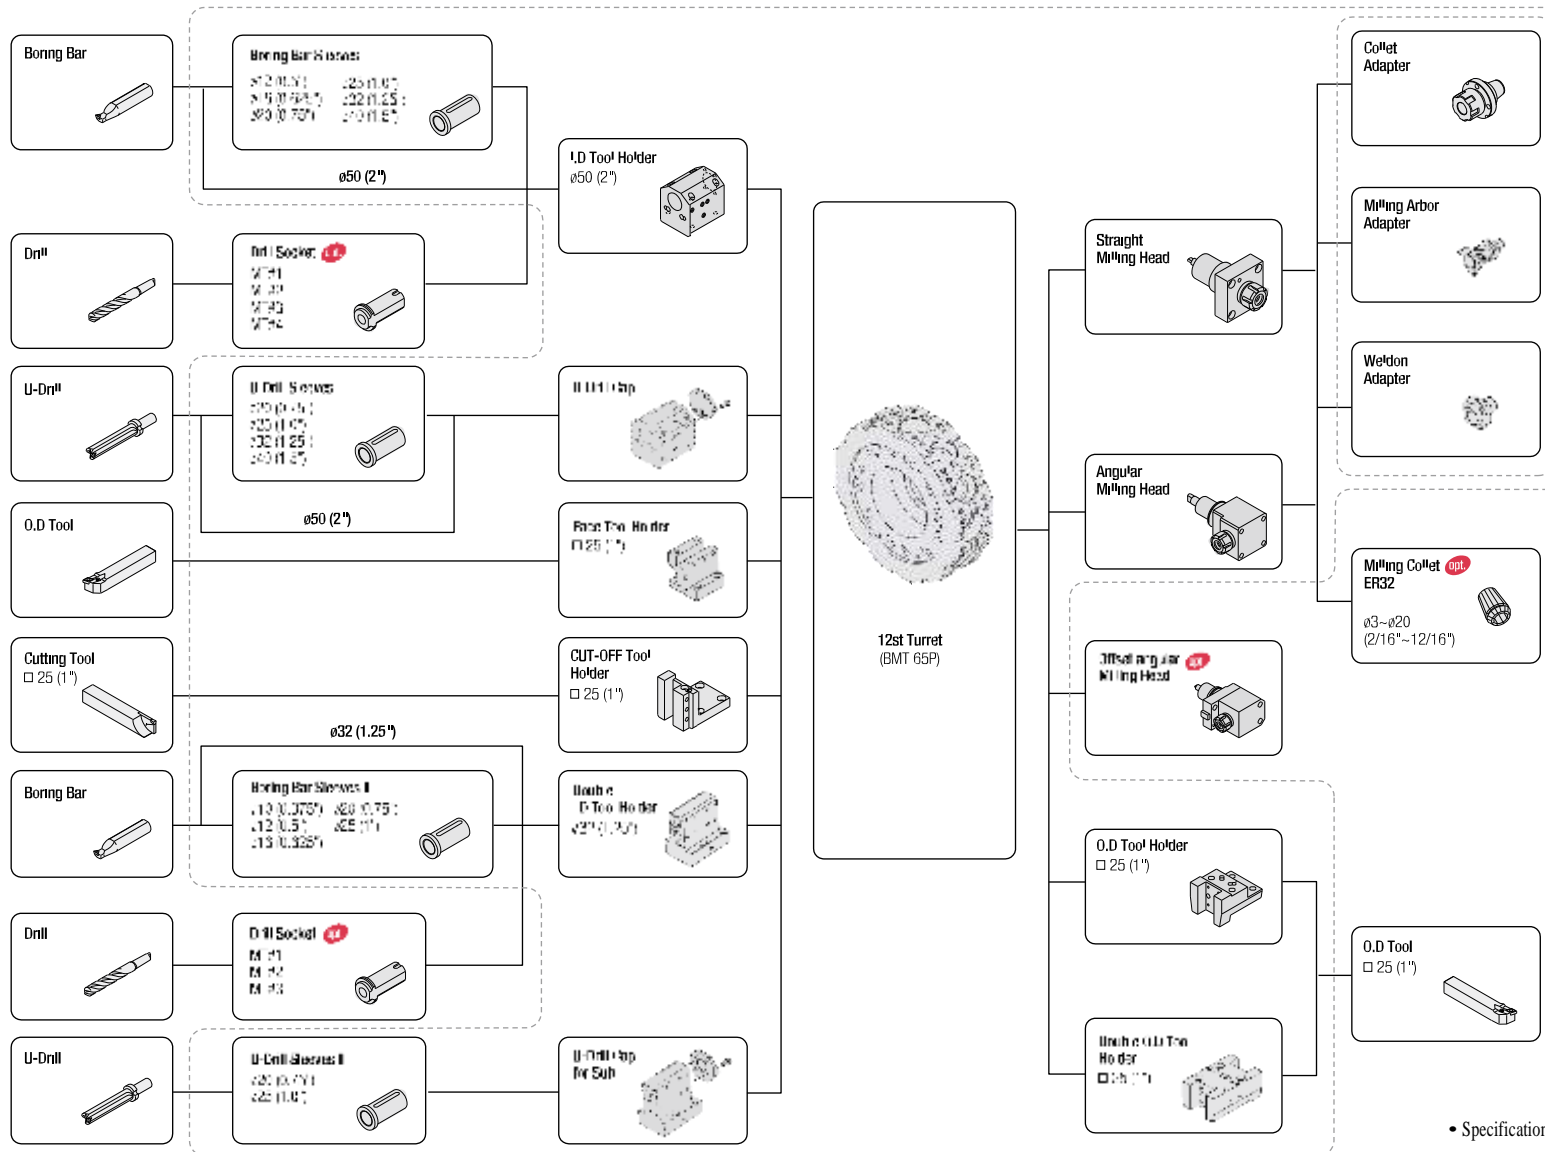

Tooling system

Unit : mm (inch)

PUMA 2600MS / 2600LMS / 2600SY / 2600LSY **opt.**
24 station. - BMT65P

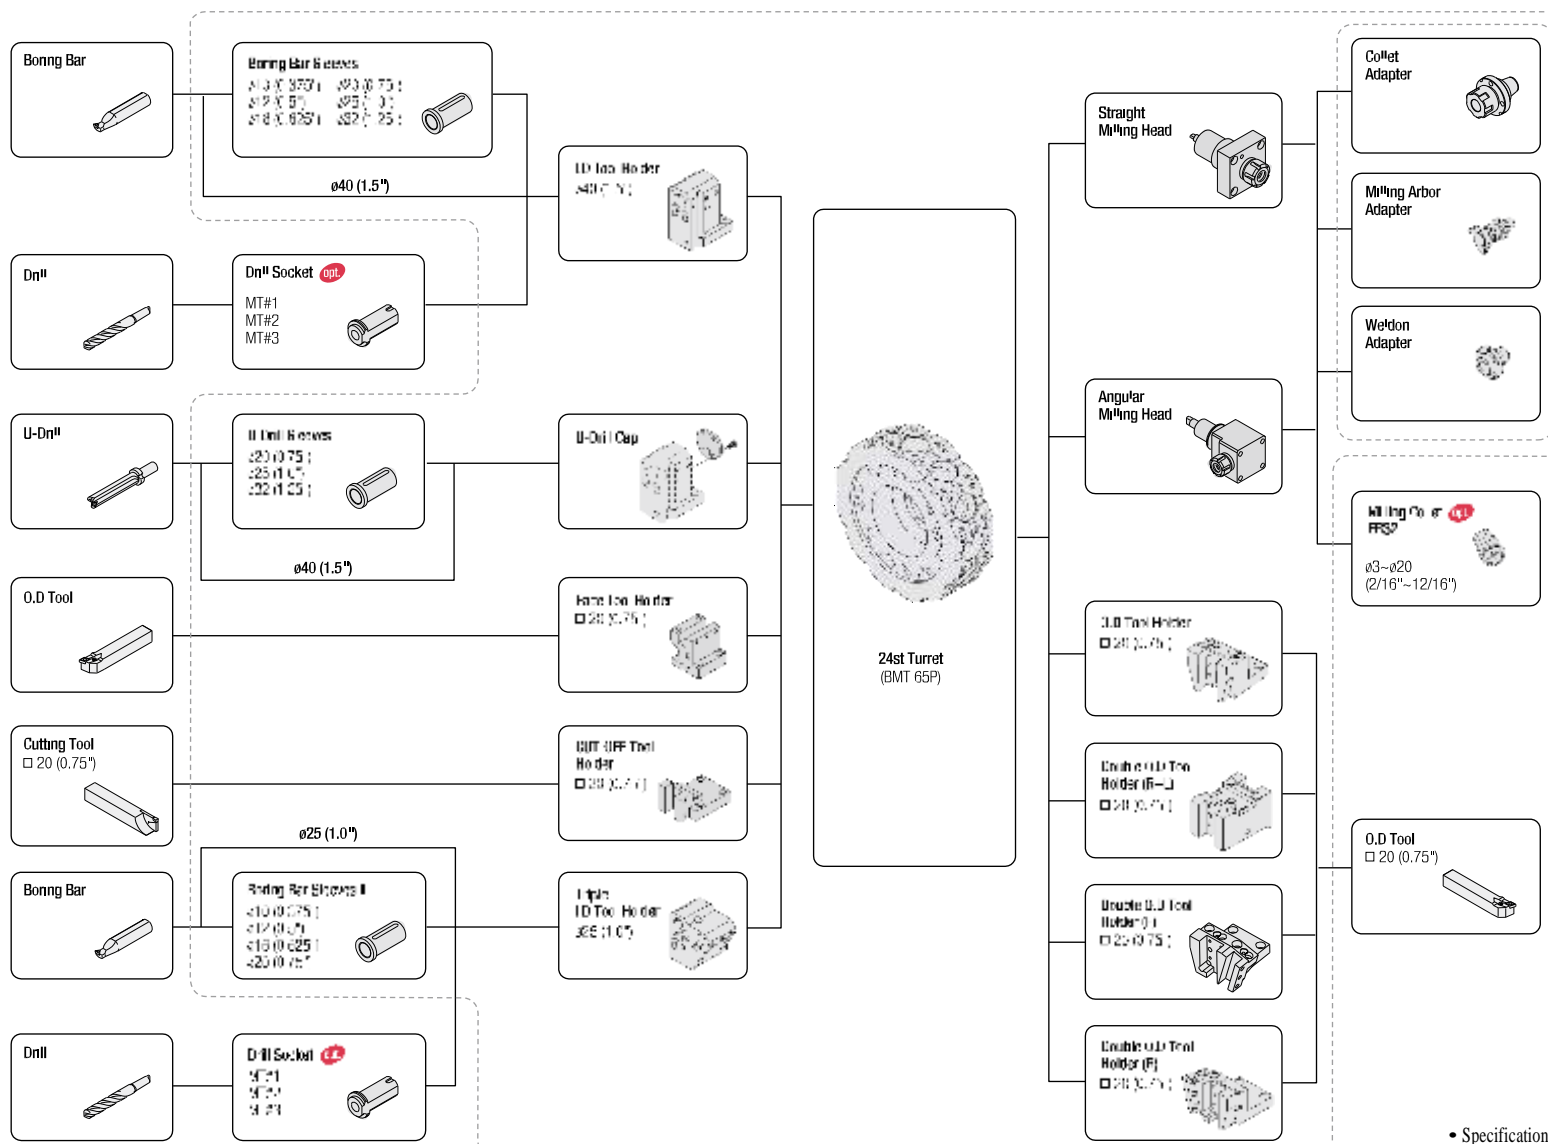


• Specifications are subject to change without prior notice.

Tooling system

Unit : mm (inch)


PUMA 3100 / 3100L / 3100XL / 3100UL Std.

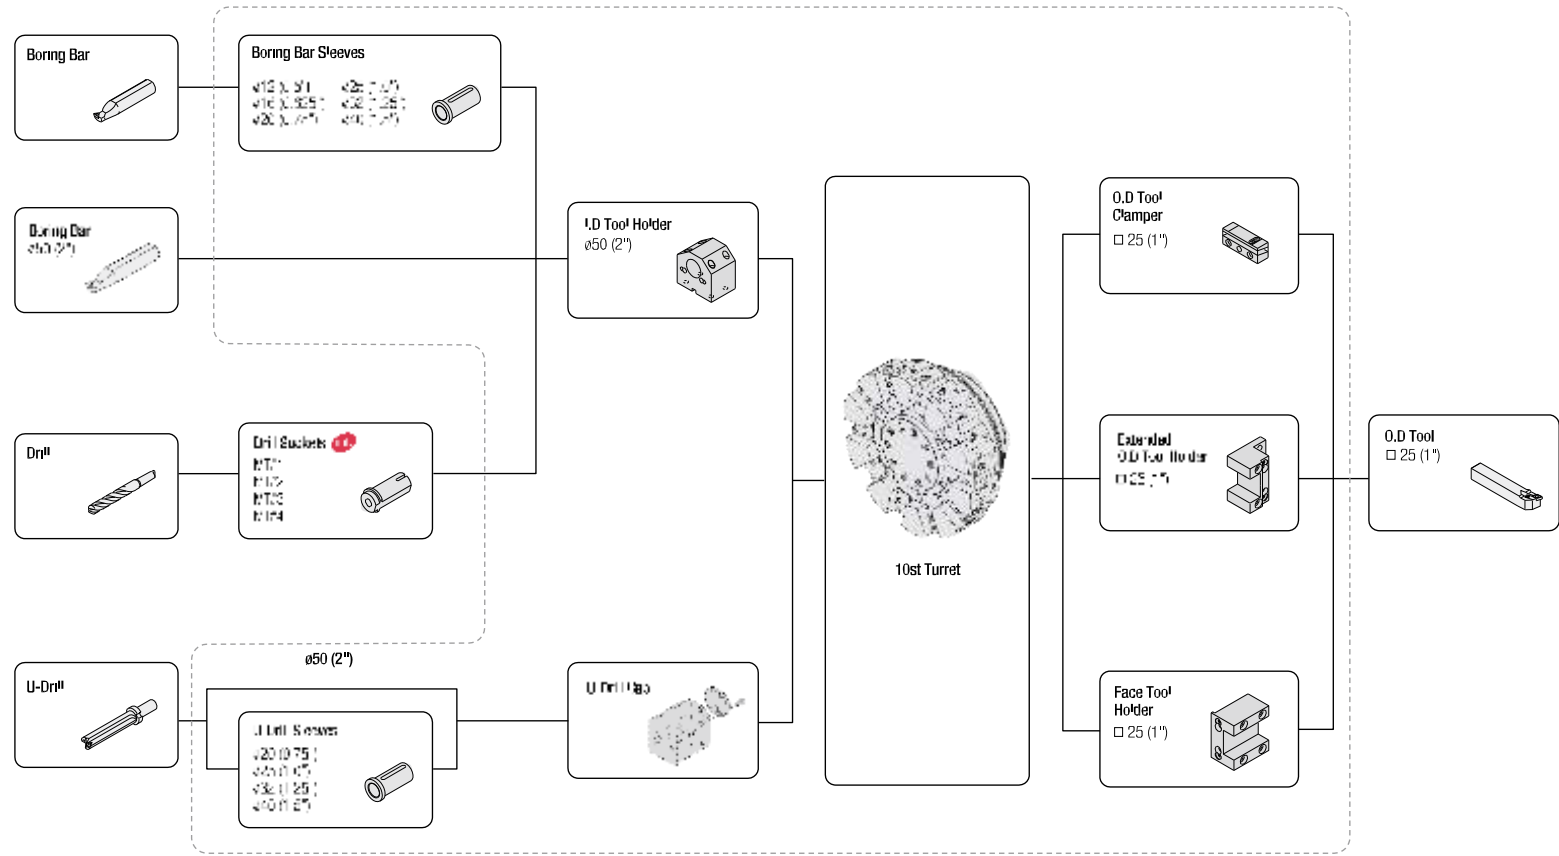


• Specifications are subject to change without prior notice.

Tooling system

Unit : mm (inch)

PUMA 3100M / 3100LM / 3100XLM / 3100ULM / 3100Y / 3100LY / 3100 XLY / 3100ULY 
12 station. - BMT65P

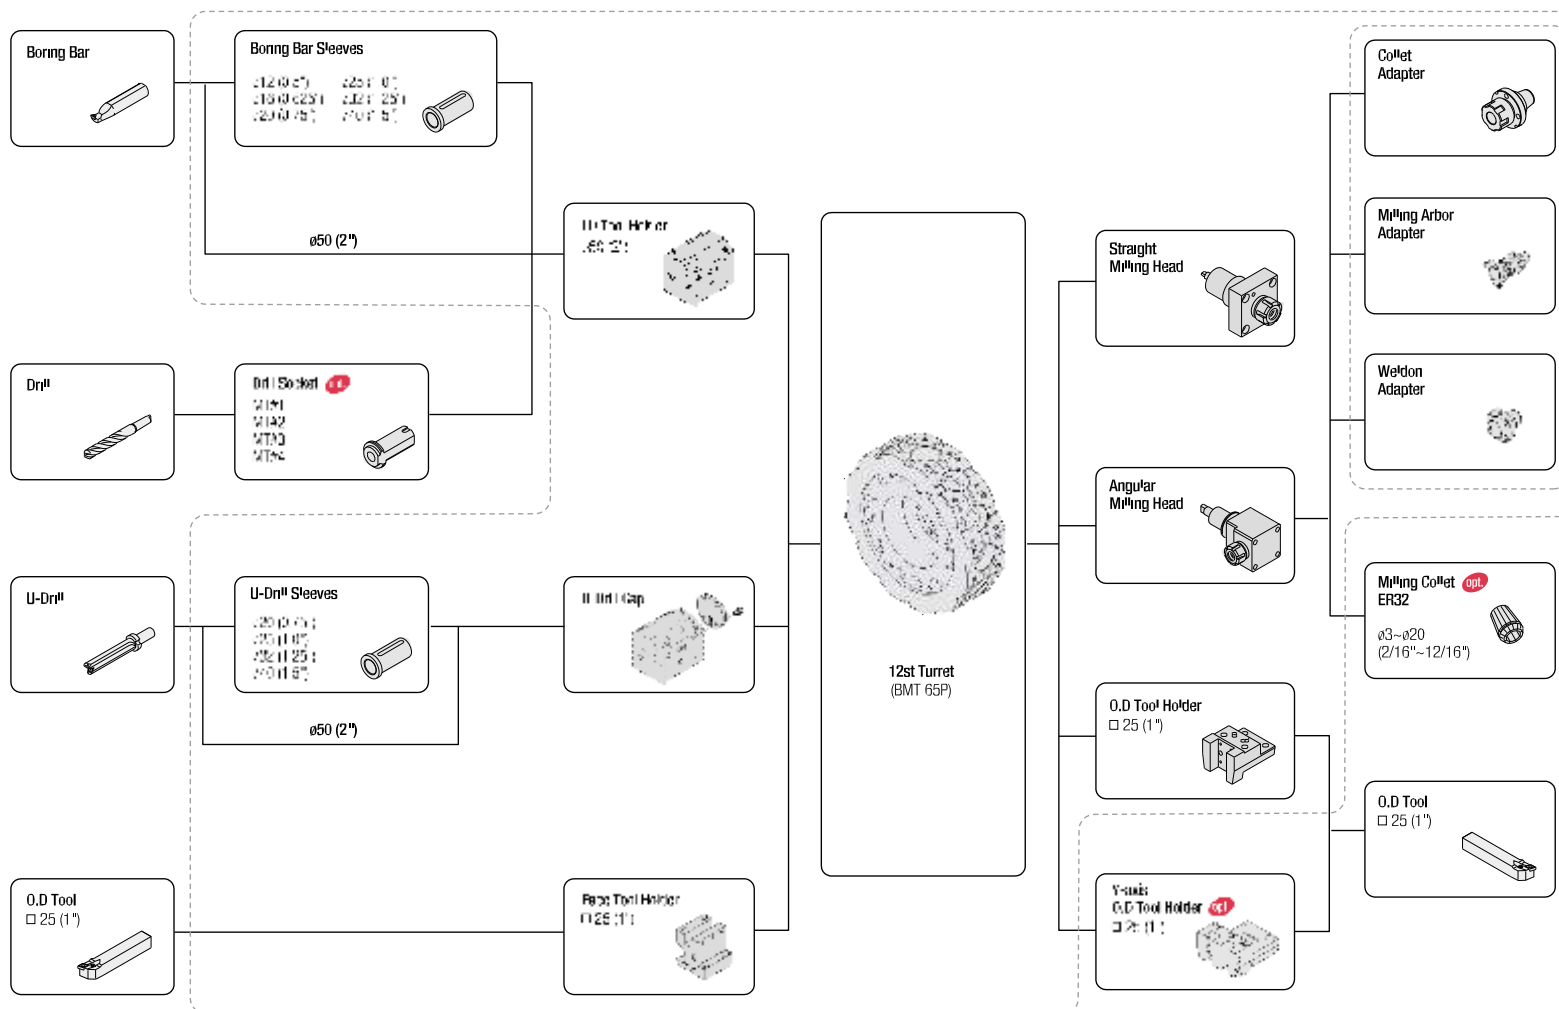



- Specifications are subject to change without prior notice.

Tool Interference Diagram

Unit : mm (inch)


PUMA 2100 / 2100L / 2600 / 2600L
12 station.

PUMA 2100S / 2100LS / 2600S 2600LS
12 station.

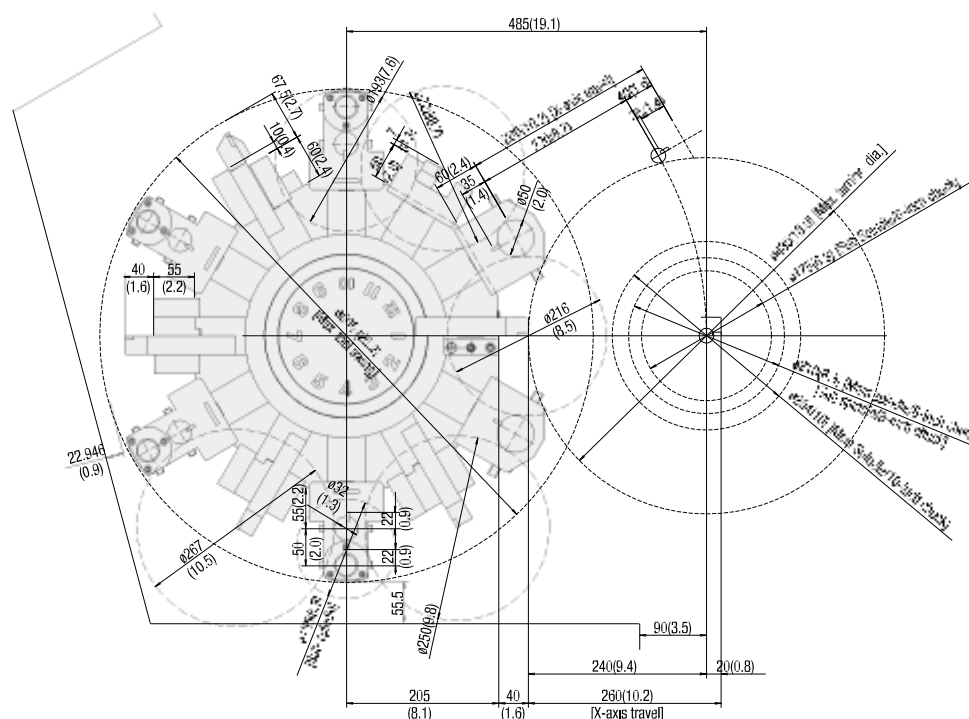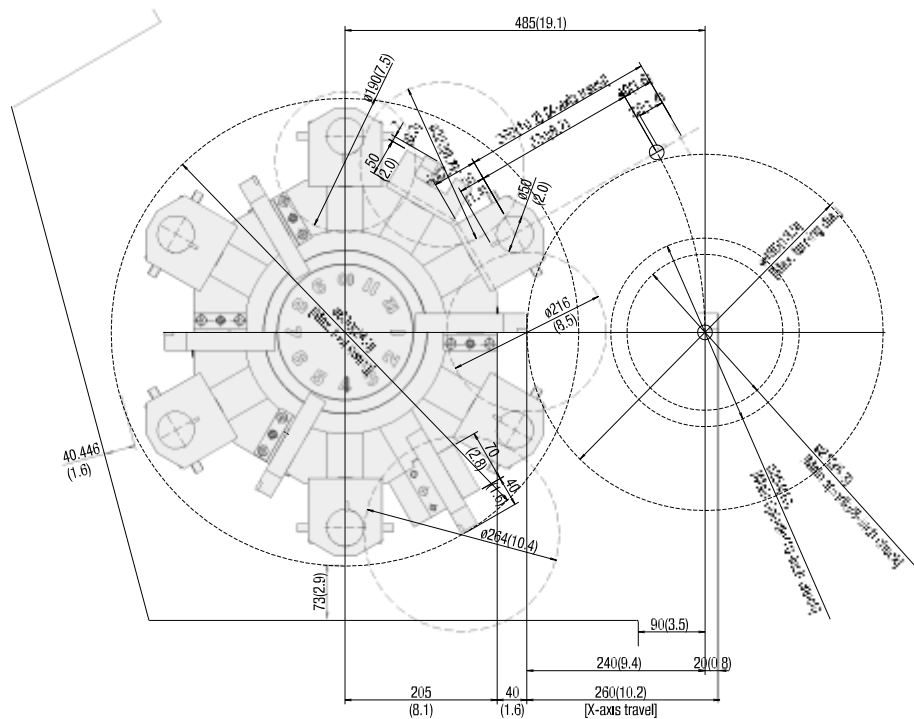

PUMA 2100M / 2100LM
12 station. - BMT55P

PUMA 2100MS / 2100LMS
12 station. - BMT55P


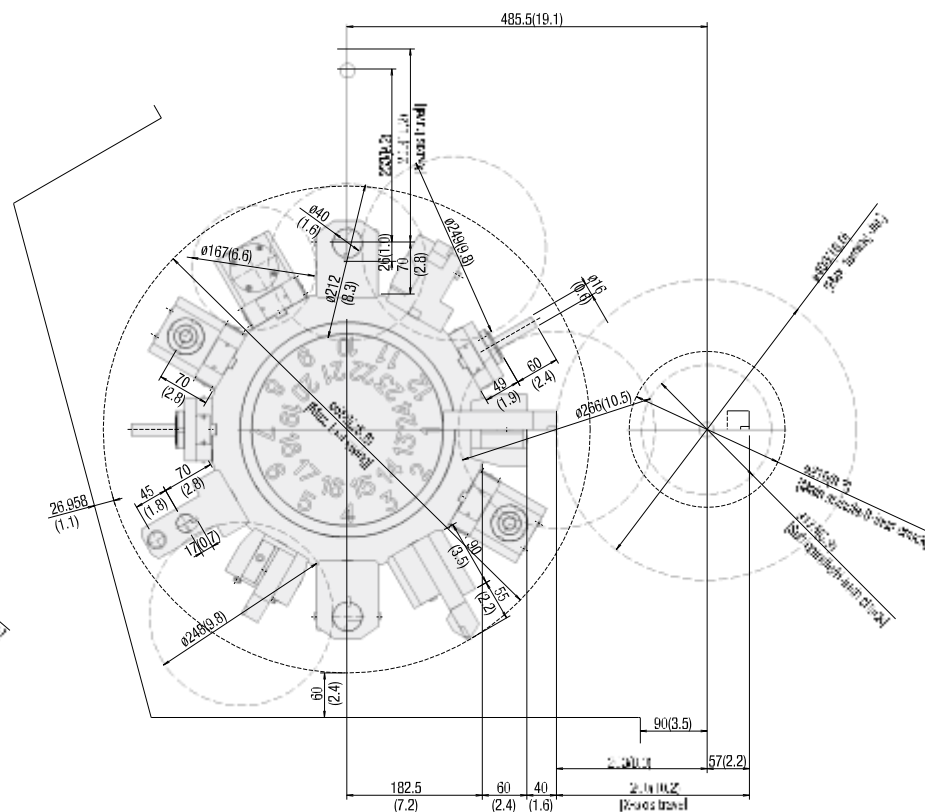


Tool Interference Diagram

Unit : mm (inch)

PUMA 2100M / 2100LM / 2600M / 2600LM
12 station. - BMT65P

PUMA 2100MS / 2100LMS / 2600MS / 2600LMS
12 station. - BMT65P

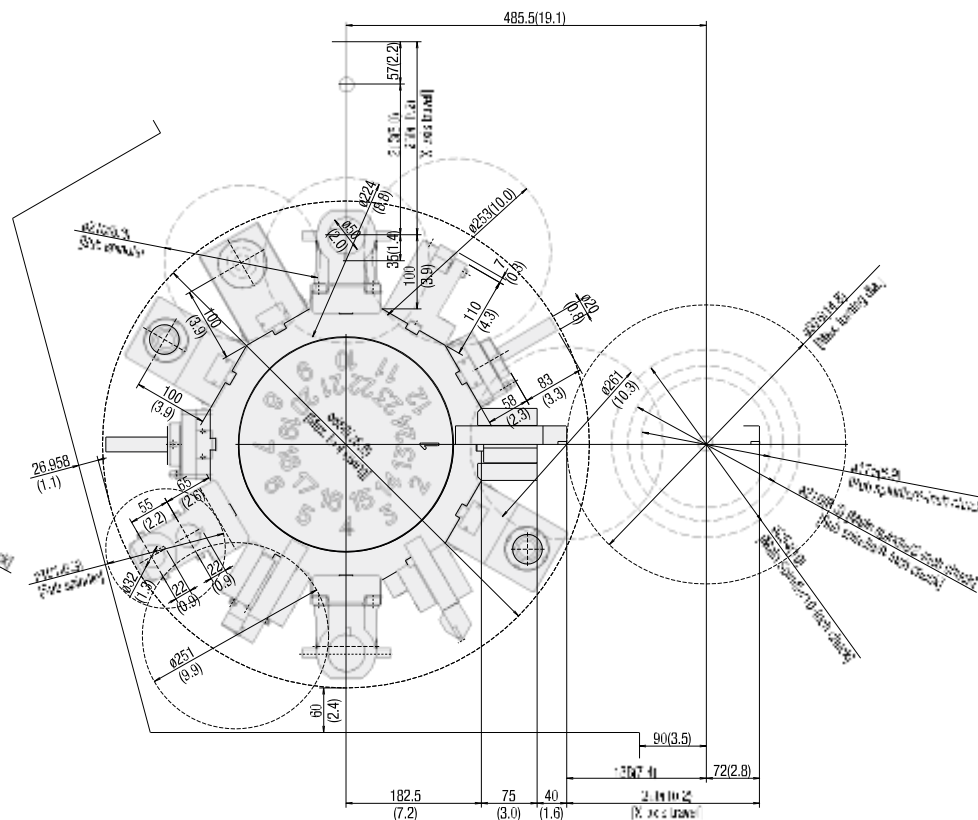
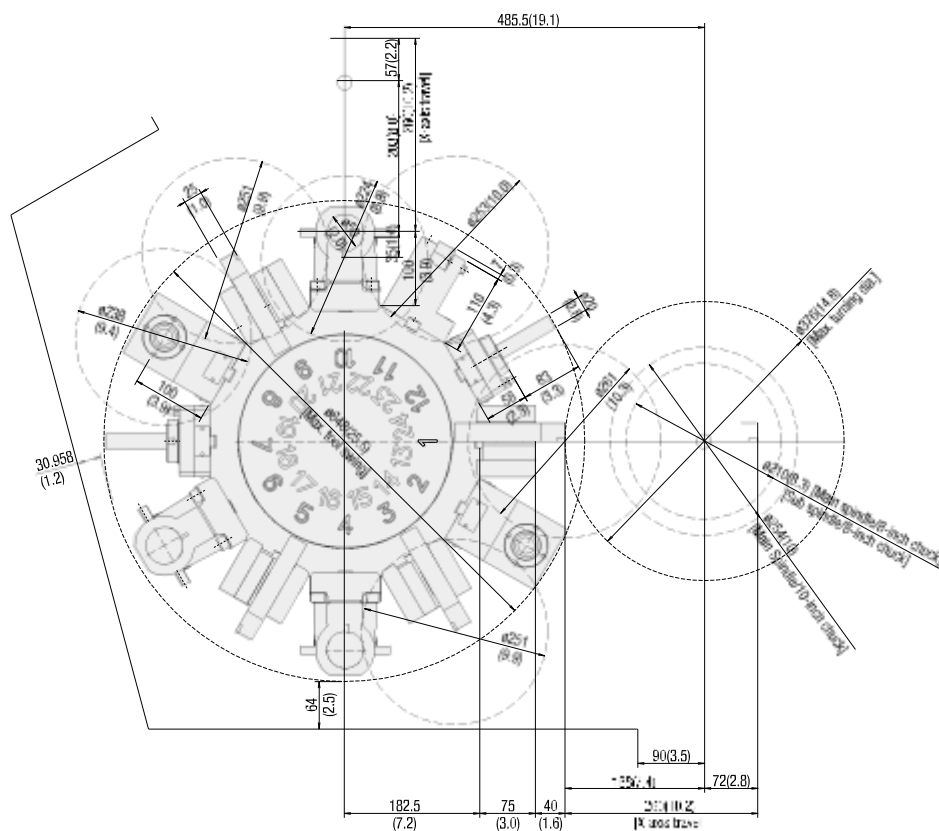


Tool Interference Diagram

Unit : mm (inch)

PUMA 2100M / 2100LM
24 station. - BMT55P

PUMA 2100MS / 2100LMS
24 station. - BMT55P

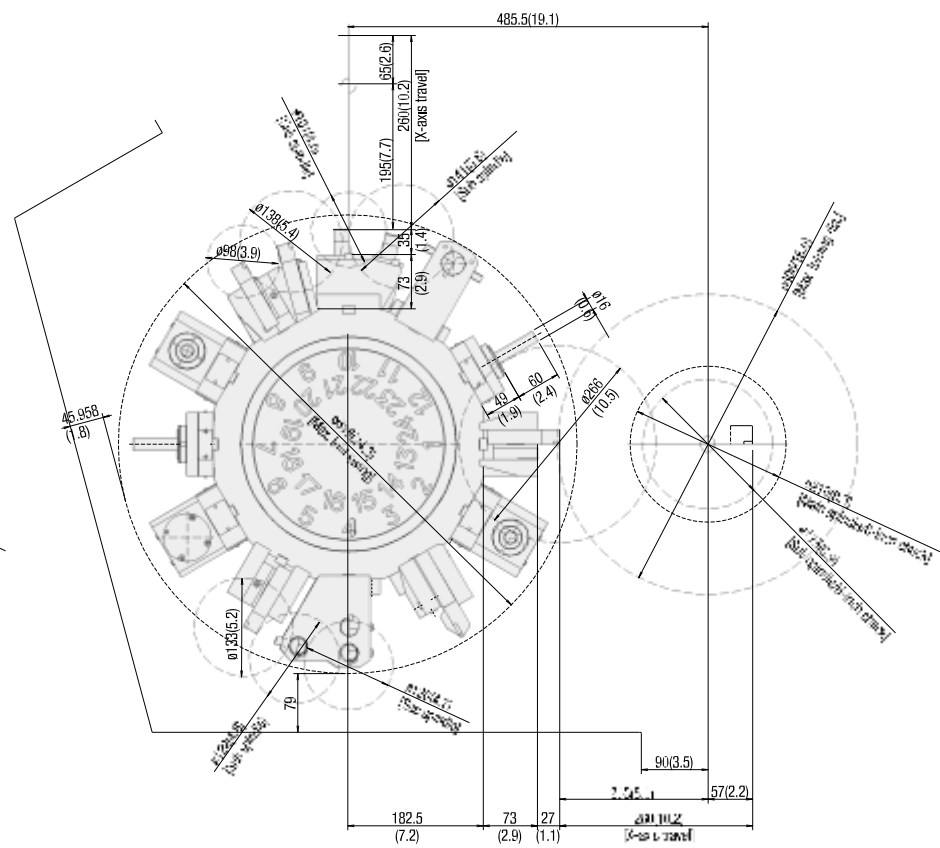
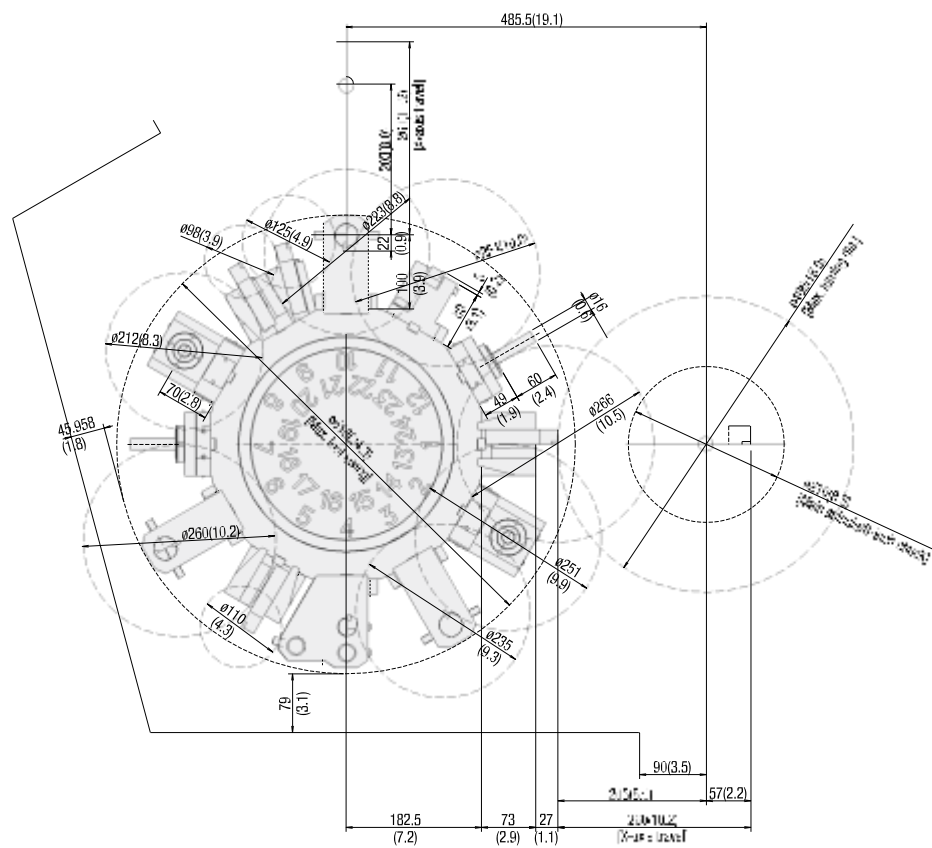


Tool Interference Diagram

Unit : mm (inch)


PUMA 2100M / 2100LM / 2600M / 2600LM
24 station. - BMT65P

PUMA 2100MS / 2100LMS / 2600MS / 2600LMS
24 station. - BMT65P

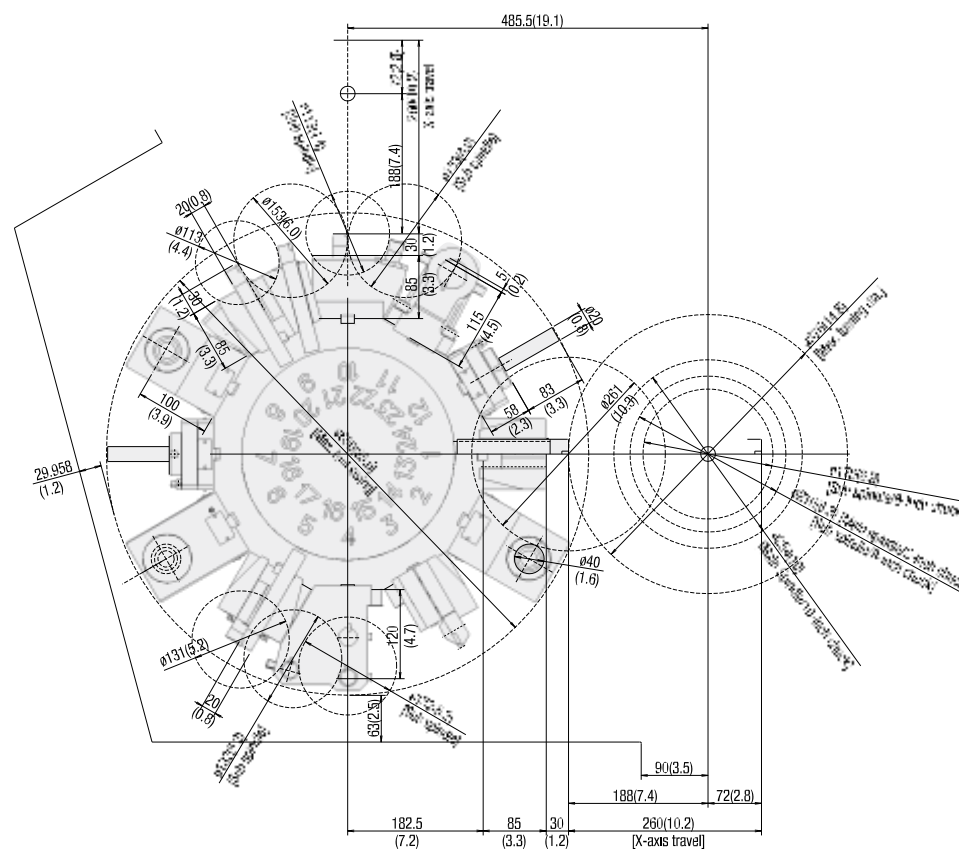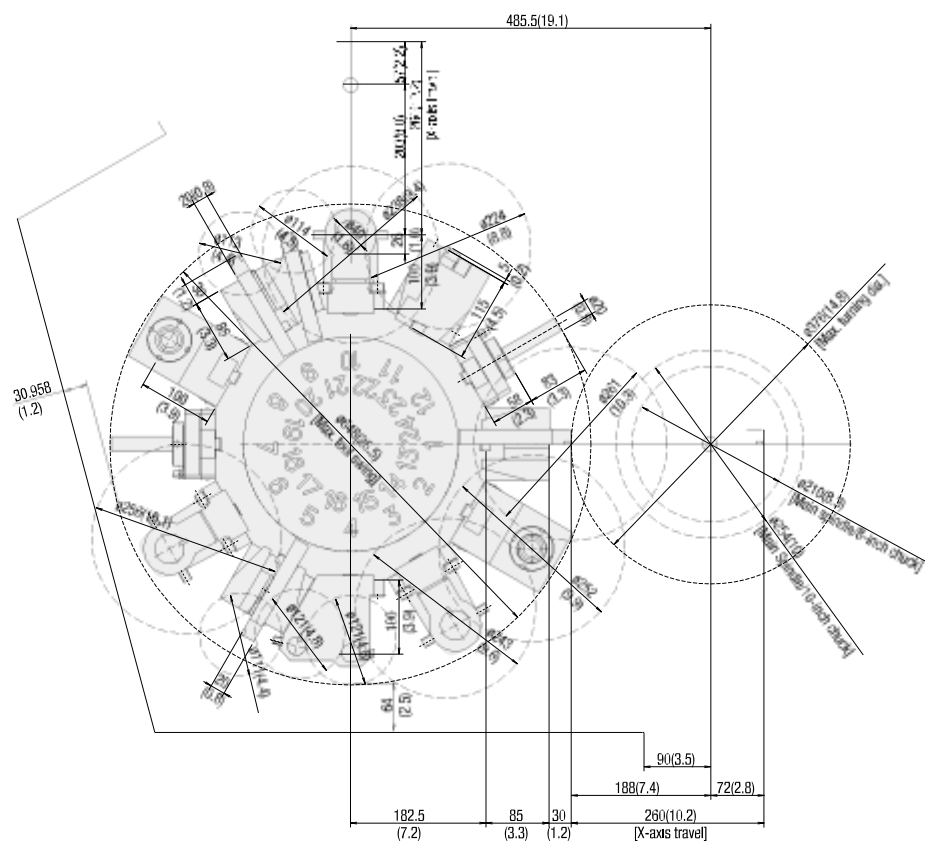

PUMA 2100SY / 2100LSY
12 station. - BMT55P

PUMA 2100Y / 2100LY
12 station. - BMT55P

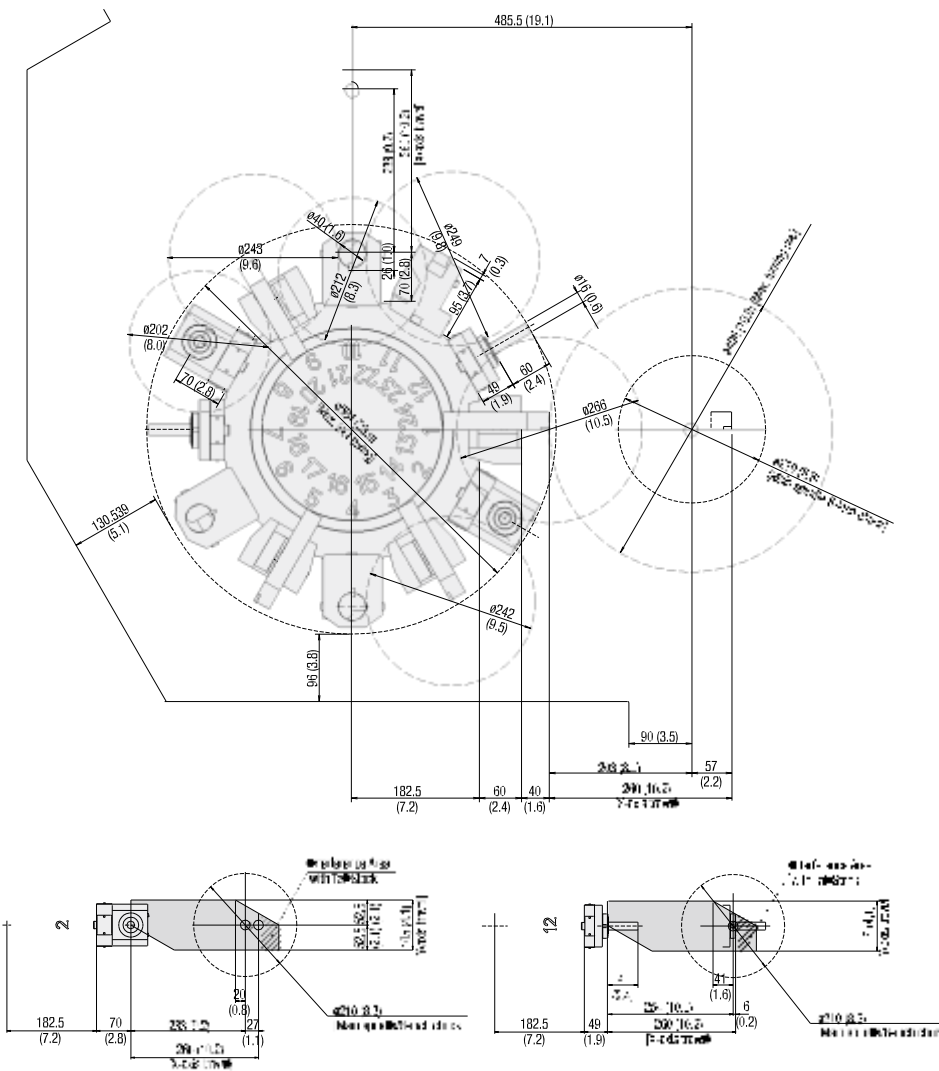


Tool Interference Diagram

Unit : mm (inch)


PUMA 2100SY / 2100LSY / 2600SY / 2600LSY
12 station. - BMT65P

PUMA 2100Y / 2100LY / 2600Y / 2600LY
12 station. - BMT65P

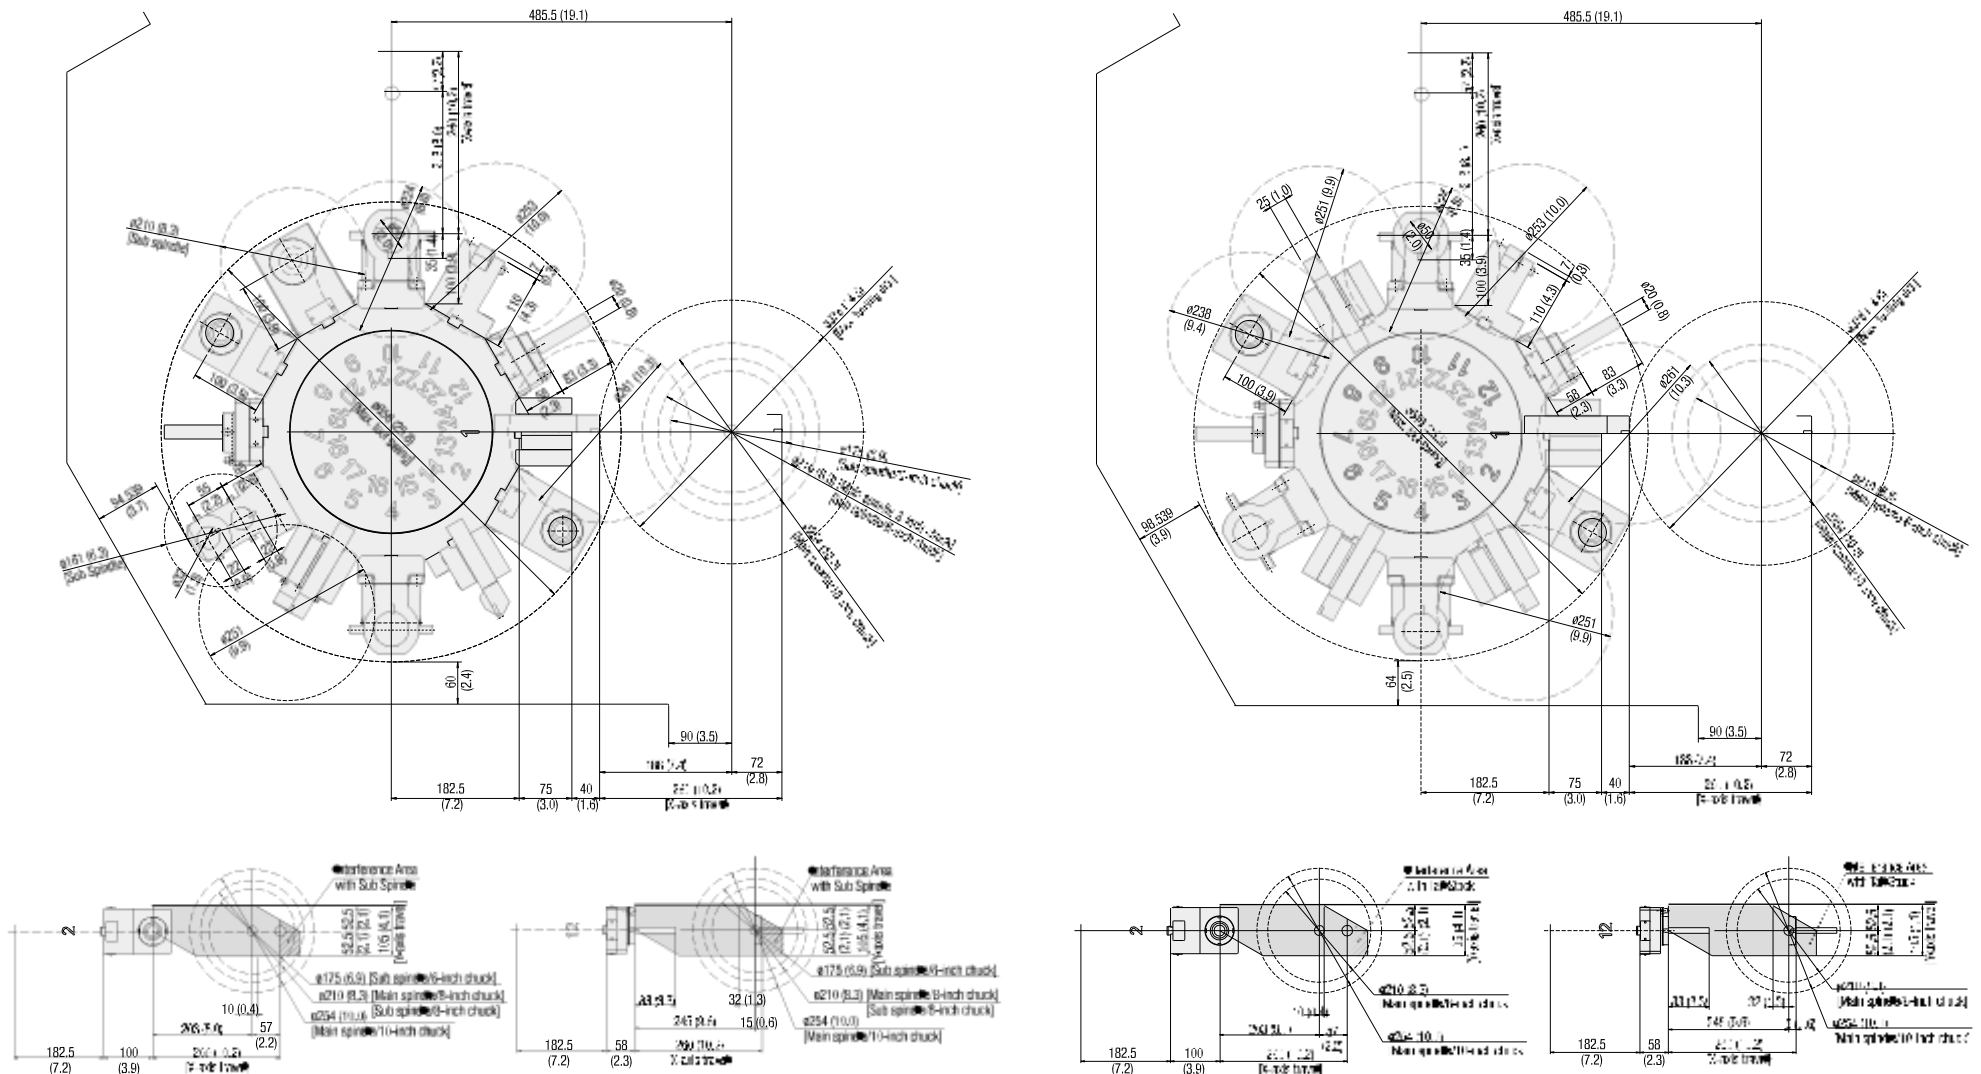

PUMA 2100SY / 2100LSY
24 station. - BMT55P

PUMA 2100Y / 2100LY
24 station. - BMT55P


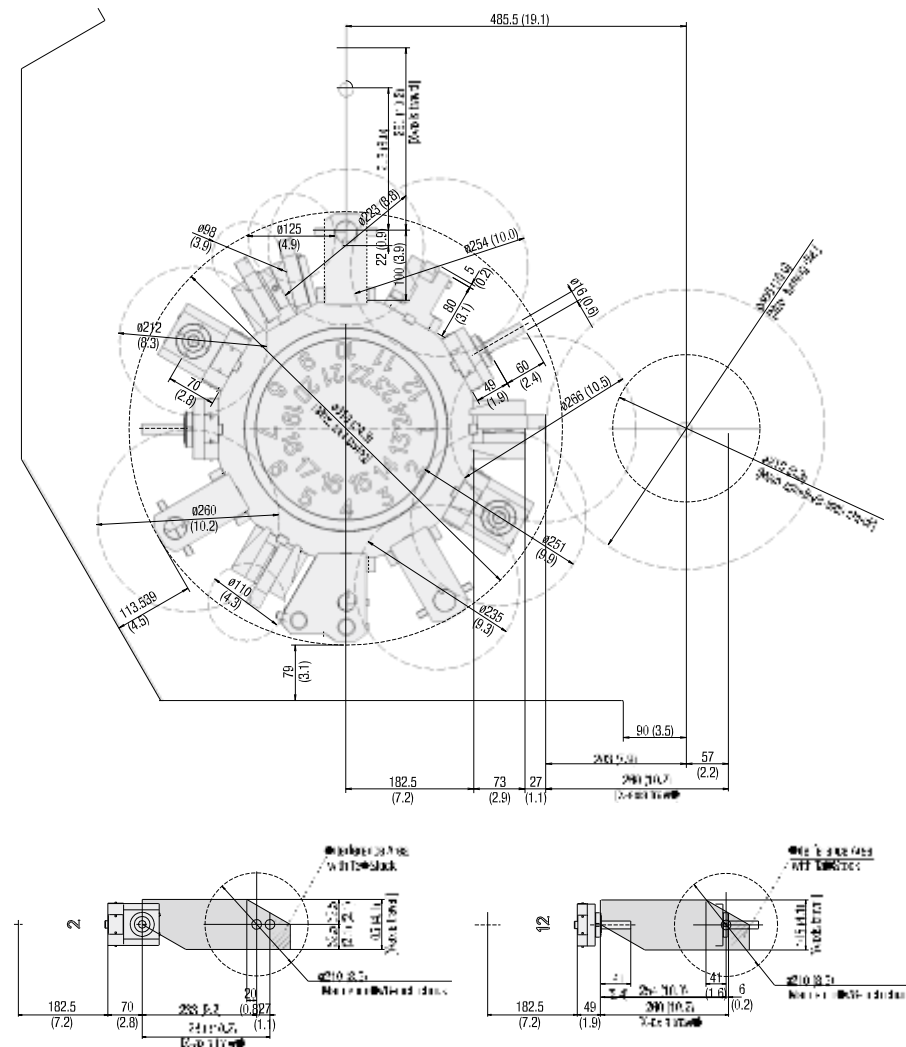


Tool Interference Diagram

Unit : mm (inch)

PUMA 2100SY / 2100LSY / 2600SY / 2600LSY
24 station. - BMT65P

PUMA 2100Y / 2100LY / 2600Y / 2600LY
24 station. - BMT65P

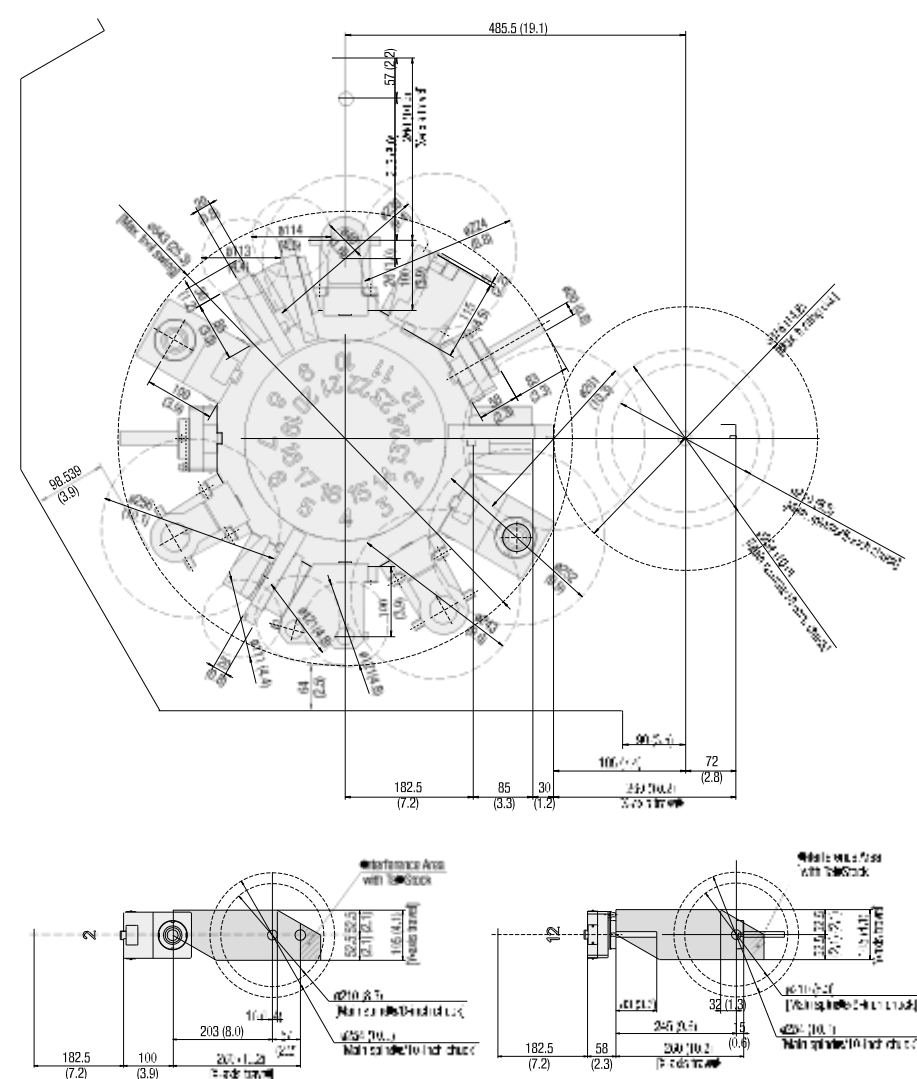
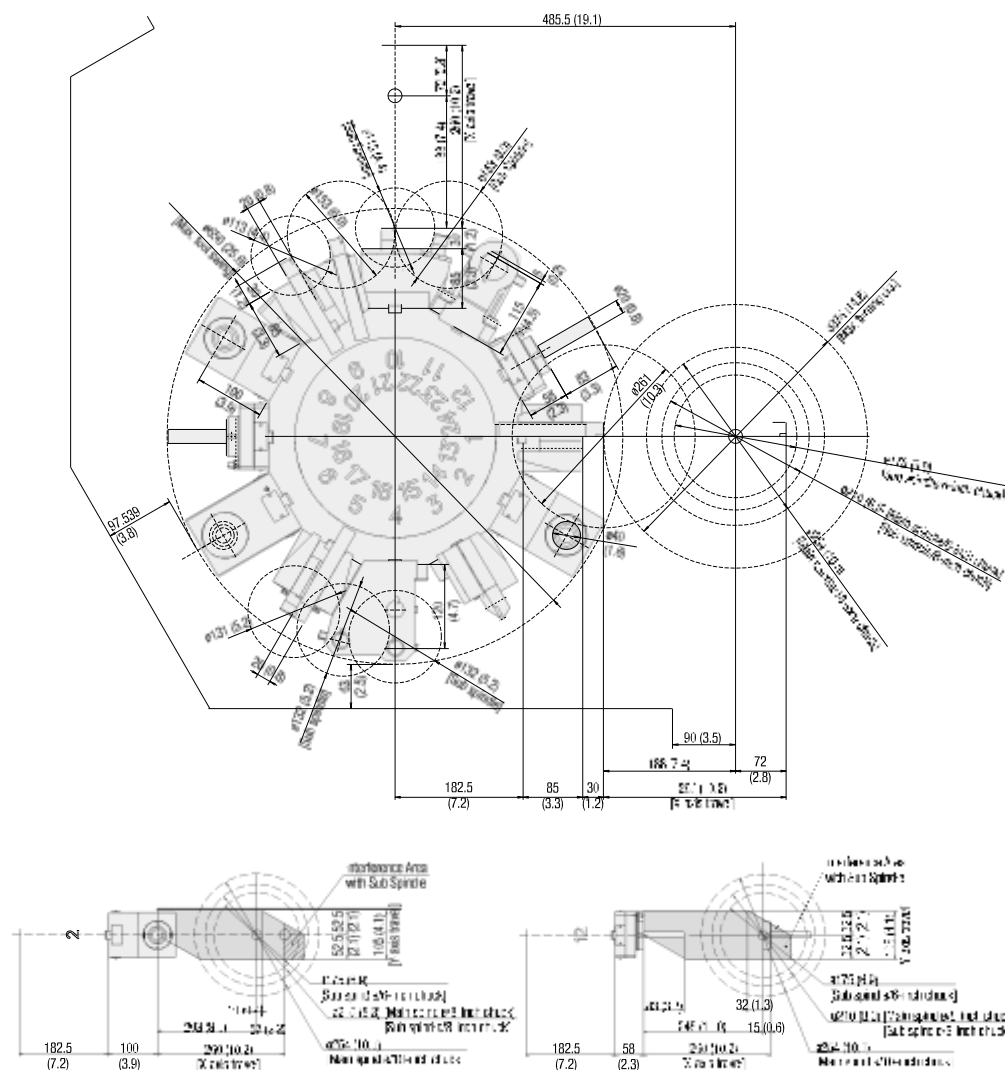


Tool Interference Diagram

Unit : mm (inch)

PUMA 3100 / 3100L
10 station

PUMA 3100XL / 3100UL
10 station

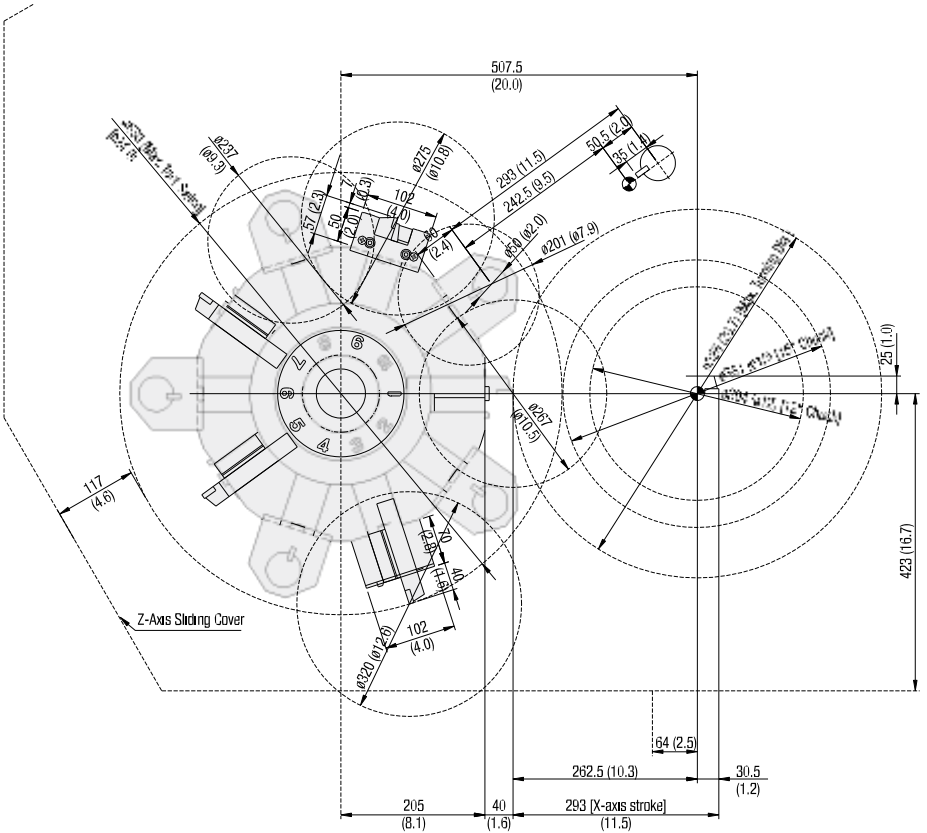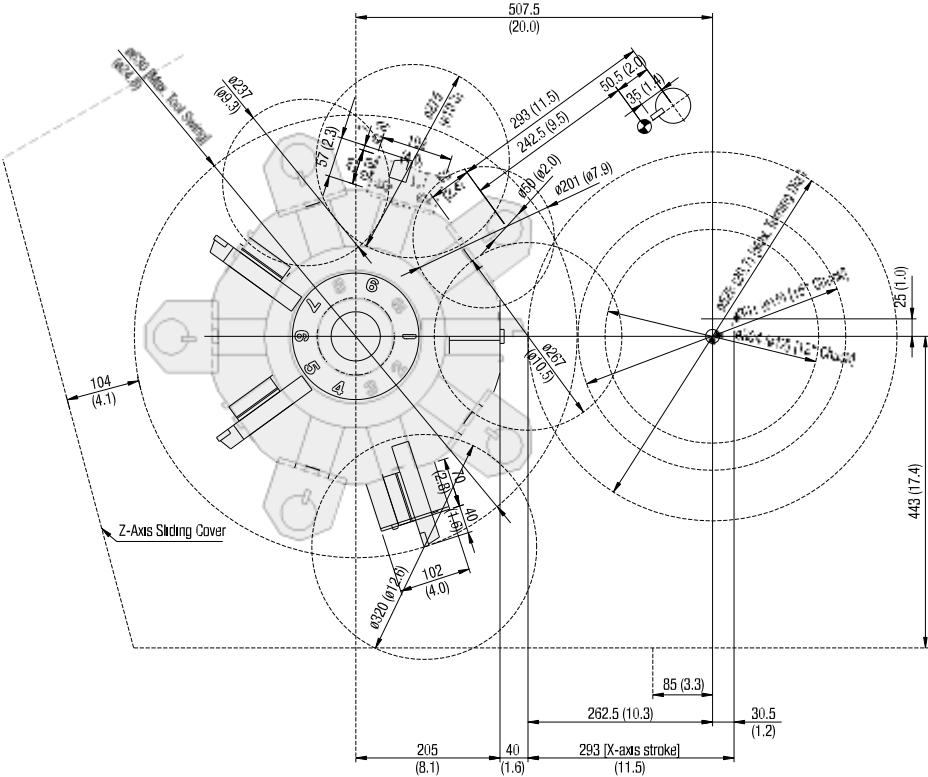


Tool Interference Diagram


Unit : mm (inch)

PUMA 3100M / 3100LM / 3100Y / 3100LY


12 station. - BMT65P

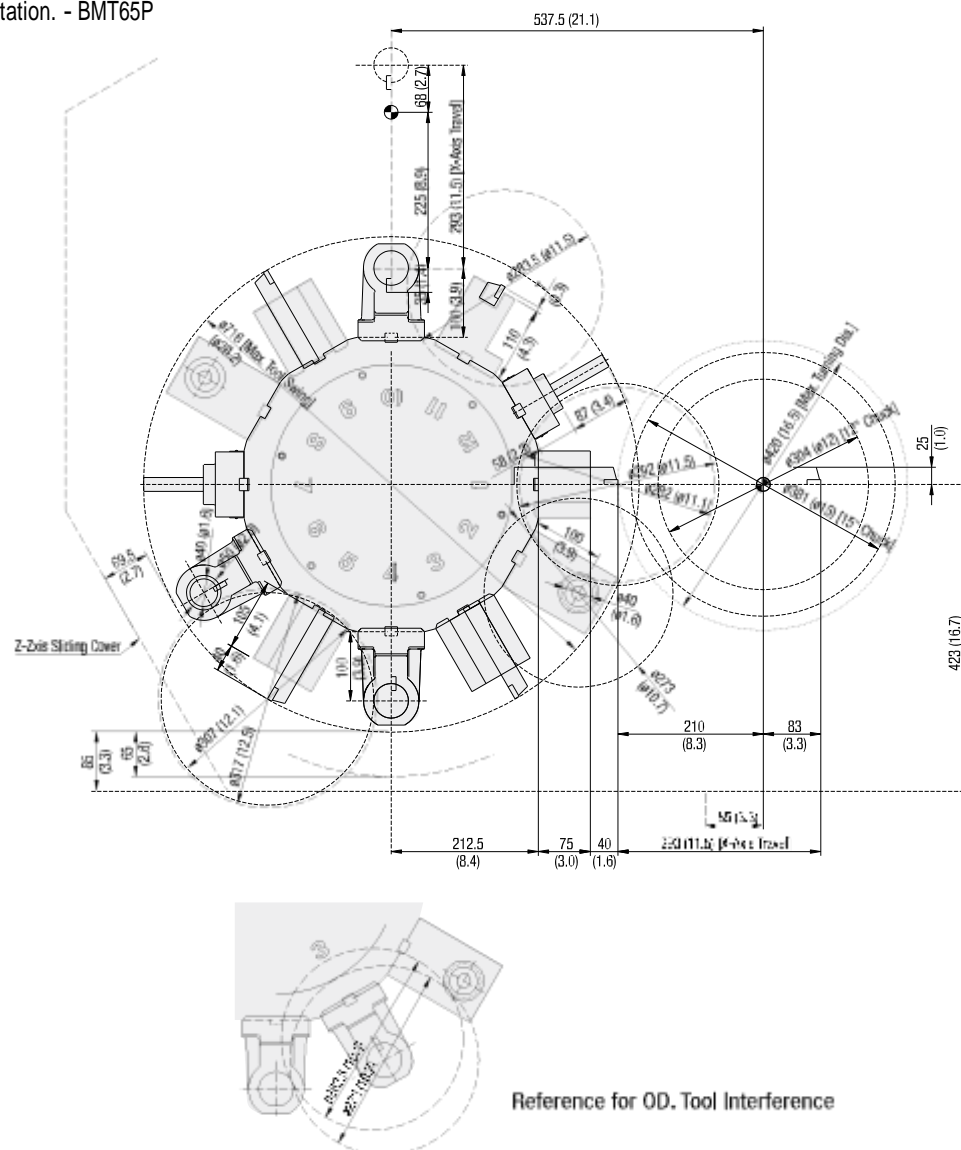

3-AXIS

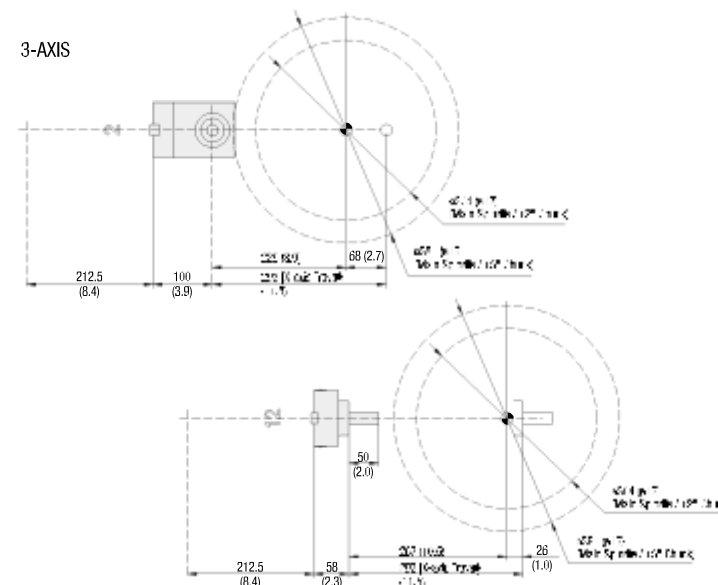


Y-AXIS

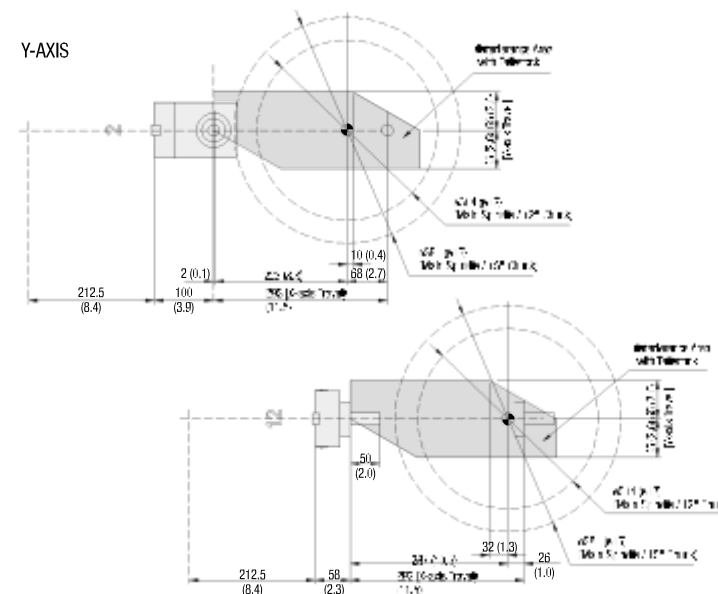



Tool Interference Diagram

Unit : mm (inch)



PUMA 3100XLM / 3100ULM / 3100 XLY / 3100ULY
12 station. - BMT65P

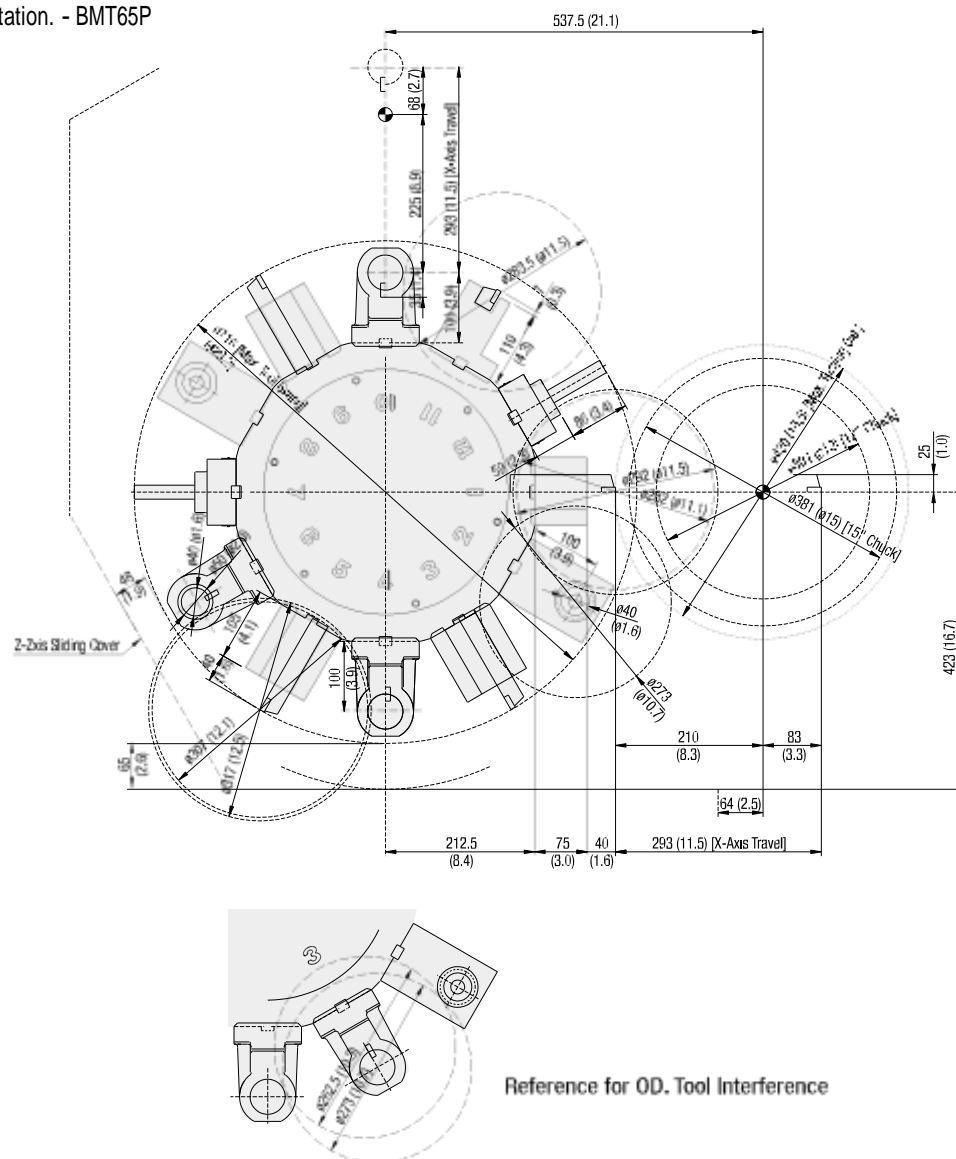

3-AXIS

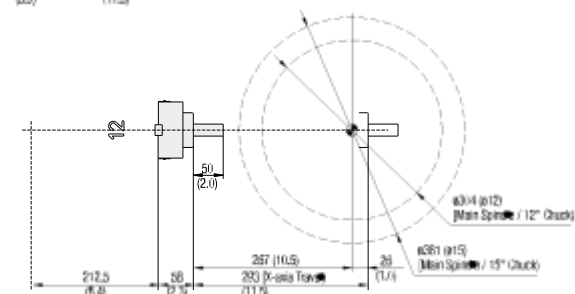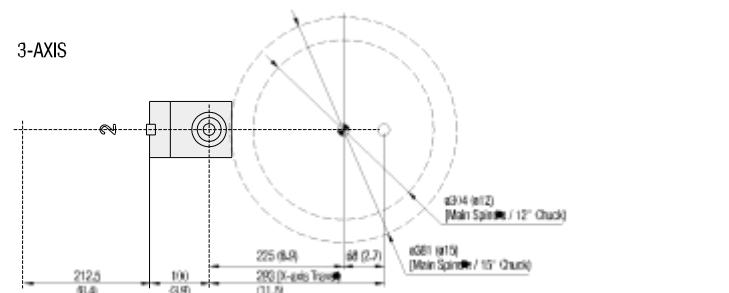

Y-AXIS

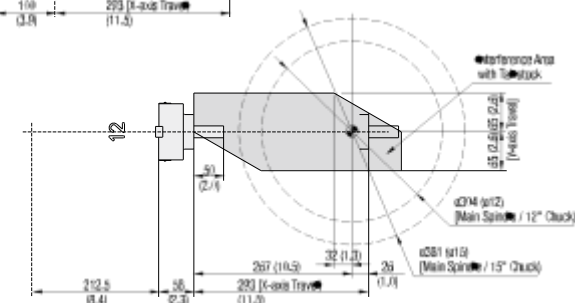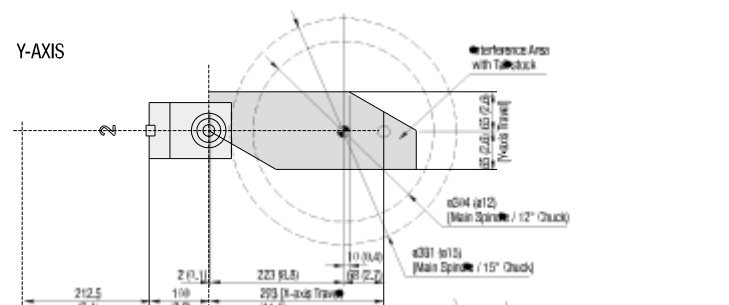

PUMA 2100/2600/3100 series

Working range / Tooling system / Tool Interference Diagram



<http://www.doosanmachinetools.com>

Doosan Infracore Machine tools

Head Office

Doosan Tower 20th FL., 275, Jangchungdan-Ro(St), Jung-Gu, Seoul
Tel : +82-2-3398-8693 / 8671 / 8680 Fax : +82-2-3398-8699

Doosan Infracore America Corp.

19A Chapin Rd., Pine Brook, NJ 07058, U.S.A. Tel : +1-973-618-2500 Fax : +1-973-618-2501

Doosan Infracore Germany GmbH

Emdener Strasse 24, D-41540 Dormagen, Germany Tel : +49-2133-5067-100 Fax : +49-2133-5067-001

Doosan Infracore Yantai Co., LTD

13 Building, 140 Tianlin Road, Xuhui District, Shanghai, China (200233) Tel : +86-21-6440-3384 (808, 805) Fax : +86-21-6440-3389

Doosan Infracore India Pvt., Ltd. Technical Center

106 / 10-11-12, Amruthalli, Bellary road, Byatarayanapura, Bagalore 560092, India Tel : +91-80-4266-0100 / 0122 / 0101

Doosan International South East Asia Pte Ltd.

42 Benoi Road, Jurong 629903, Singapore Tel : +65-6499-0200 Fax : +65-6861-3459

